

Citation 100 Far-field voice-activated speaker powered by Google, with Bluetooth

SKU: HKCITATION100BLKAM, HKCITATION100GRYAM, HKCITATION100BLKEU, HKCITATION100GRYEYU, HKCITATION100GRYJN, HKCITATION100BLKAS, HKCITATION100GRYAS, HKCITATION100BLKRU, HKCITATION100GRYRU
HKCITA100MKIIBLKAM, HKCITA100MKIIGRYAM, HKCITA100MKIIBLKEU, HKCITA100MKIIGRYEU, HKCITA100MKIIGRYJN, HKCITA100MKIIBLKAS, HKCITA100MKIIGRYAS, HKCITA100MKIIBLKRU, HKCITA100MKIIGRYRU



CONTENTS

Technical Specifications	2
Safety Instruction, Warning & Notes	5
Dismantling Instructions	6
Set Block Diagram	20
Set Wiring Diagram	21
Circuit Diagrams	22
Layout Diagrams	28
Mechanical Exploded View	34
Spare Parts List	35
Revision List	36



Beautiful Sound That Speaks To You.

The Harman Kardon Citation 100 is a next generation compact smart speaker that fits in any space and fills your room with powerful sound. Easy to use, Citation 100 blends innovation in home audio with attention to detail in design, allowing for sophisticated looks and amazing sound with strong bass. Music lovers will love the room-filling sound and access to over 300 music services and high-definition streaming through Chromecast built-in. The Google Assistant brings convenient voice control to your Citation 100 for hands-free help around the home. Get answers, play music, organize your day, control your smart home, enjoy your entertainment and more, just with your voice!

Features

- ▶ Premium industrial design
- ▶ Sound quality with sophistication
- ▶ Music everywhere
- ▶ Hands-free help with your voice, powered by the Google Assistant
- ▶ Play and control your music with your voice
- ▶ Over 300 music streaming services available with Wi-Fi streaming
- ▶ More is better
- ▶ Privacy please
- ▶ Always the best
- ▶ Simple setup with the Google Home app on iOS and Android
- ▶ Wireless Bluetooth® streaming



Premium industrial design

Citation 100 blends innovation in home audio entertainment with a sophisticated and beautiful design. The premium blended wool fabric, made by Kvadrat, is dirt repellent and flame retardant.

Sound quality with sophistication

For over 65 years for Harman Kardon has been dedicated to delivering luxurious audio experiences that allow the listener to feel the music and immerse them in the moment. Citation is the ultimate expression and is the worlds first truly premium product of its kind.

Music everywhere

The Citation 100 delivers multi-room capability by adding additional Citation speakers to create the ultimate whole house audio experience. You can play the same music or different music in different rooms and control it from a tablet or smartphone.

Hands-free help with your voice, powered by the Google Assistant

The Google Assistant brings convenient voice control to your Citation wireless home sound system. Get answers, play music, tackle your day, enjoy your entertainment and control your smart home with just your voice.

Play and control your music with your voice

Use your voice to ask for your favorite songs and enjoy high-definition music streaming, powered by the cloud.

Over 300 music streaming services available with Wi-Fi streaming

Listen to your favorite audio content, Internet radio and podcasts, all in high-definition through Chromecast built-in.

More is better

Pair two Citation 100 speakers in the same room for stereo sound.

Privacy please

For additional security and privacy, the speaker's microphones can be switched off. Multi-color LED indicators show the current state of these microphones.

Always the best

With automatic software updates for new features and services, your music and voice options will always be up to date and at its best.

Simple setup with the Google Home app on iOS and Android

With the free Google Home app for iOS and Android, you can easily setup and manage any of the Citation speakers. All speakers support both 2.4GHz and 5GHz Wi-Fi connections.

Wireless Bluetooth® streaming

Wirelessly stream your music from your smartphone or tablet.

What's in the box:

- 1 x Citation 100
- 1 x Quick-start guide
- 1 x Warranty sheet
- 1 x Safety sheet
- 1 x Power cable (1.8m)

Specifications:

- Model Name: Citation 100
- Transducer: 1 x 20mm tweeter, 1 x 102mm woofer
- Output power: 50W RMS
- Signal-to-noise ratio: >80dB
- Power Supply: 100-240V – 50/60Hz
- Bluetooth® version: 4.2
- Bluetooth transmitter frequency range: 2402 – 2480MHz
- Bluetooth transmitter power: <5dBm
- Bluetooth transmitter modulation: GFSK, $\pi/4$ DQPSK, 8DPSK
- Wireless network: 802.11 a/b/g/n/ac (2.4GHz/5GHz)
- 2.4G Wi-Fi transmitter frequency range: 2412 – 2472MHz (2.4GHzISM Band, USA 11 Channels, Europe and others 13 Channels)
- 2.4G Wi-Fi transmitter power: <20dBm
- 2.4G Wi-Fi modulation: DBPSK, DQPSK, CCK, QPSK, BPSK, 16QAM, 64QAM
- 5G Wi-Fi transmitter power: <23dBm
- 5G Wi-Fi modulation: QPSK, BPSK, 16QAM, 64QAM, 256QAM
- 5G Wi-Fi transmitter frequency range: 5.15 – 5.35GHz, 5.470 – 5.725GHz, 5.725 – 5.825GHz
- Supported audio formats: HE-AAC, LC-AAC, MP3, Vorbis, WAV (LPCM), FLAC, Opus
- Dimensions (W x H x D): 172 x 275 x 163 mm
- Weight: 2.7 kg (6lb)



HARMAN International Industries, Incorporated
8500 Balboa Boulevard, Northridge, CA 91329 USA

© 2018 HARMAN International Industries, Incorporated. All rights reserved. Harman Kardon is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Google, Google Play, Chromecast, Chromecast built-in, Google Home and other related marks and logos are trademarks of Google Inc. Chromecast built-in may require subscription(s). The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners. The Wi-Fi CERTIFIED Logo is certification marks of the Wi-Fi Alliance. *Requires compatible device. Availability and performance of certain other features and services are service, device and network-dependent and may not be available in all areas; subscription(s) may be required, and additional terms, conditions and/or charges may apply. Features, specifications and appearance are subject to change without notice.

www.harmankardon.com

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

For Products That Transmit and Receive RF Energy:

FCC Regulations (USA Only)

FCC Information For Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by Harman could void the user's authority to operate the equipment.

IC Statement and Warning (Canada Only)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Canadian Model

This Class B digital apparatus complies with Canadian ICES-003.

Modèle pour les Canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Products with Radio Receivers That Can Use an External Antenna:

CATV or Antenna Grounding

If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode.

Note to CATV System Installer:

This reminder is provided to call the CATV (cable TV) system installer's attention to article 820-40 of the NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

For CD/DVD/Blu-ray Disc™ Players:

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

Caution:

This product uses a laser system. To prevent direct exposure to the laser beam, do not open the cabinet enclosure or defeat any of the safety mechanisms provided for your protection. DO NOT STARE INTO THE LASER BEAM. To ensure proper use of this product, please read the owner's manual carefully and retain it for future use. Should the unit require maintenance or repair, please contact your local Harman Kardon service center. Refer servicing to qualified personnel only.

For Products That Include Batteries:



Instructions for Users on Removal and Disposal of Used Batteries.

CAUTION

Risk of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Alkaline batteries are considered nonhazardous. Rechargeable batteries (i.e., nickel cadmium, nickel metal-hydride, lithium and lithium-ion) are considered hazardous household materials and may pose an unnecessary health and safety risk.

In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

To remove the batteries from your equipment or remote control, reverse the procedure described for inserting batteries in the owner's manual.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build-up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES devices.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.


Components identified with the IEC symbol  in the parts list are of special significance to safety. When replacing a component identified with , use only the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

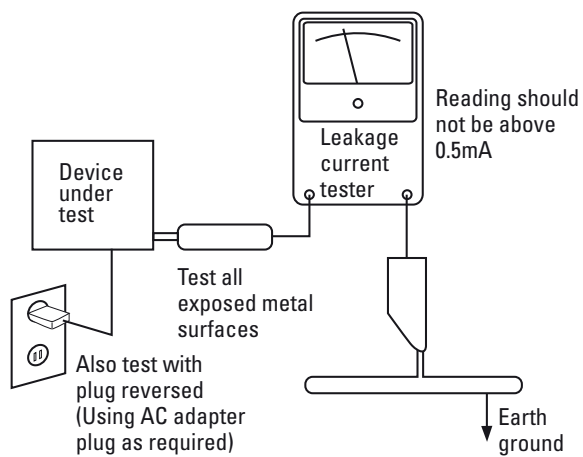



AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

DISMANTLING DIAGRAM

Tool List

Item	Description	Remark
1	Screw driver (small)	2.0
2	Screw driver (middle)	3.0
2	Screw driver (big)	4.0
3	Knife	"—" type knife(wrapped by tape)
4	Electrical screw driver	
5	Soldering iron	

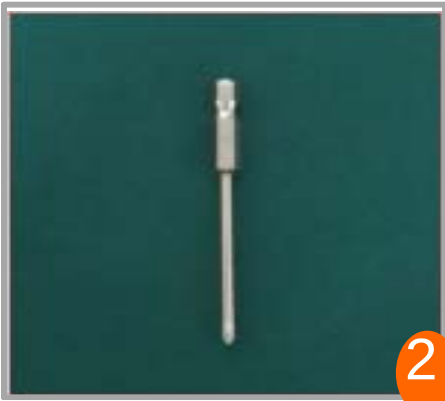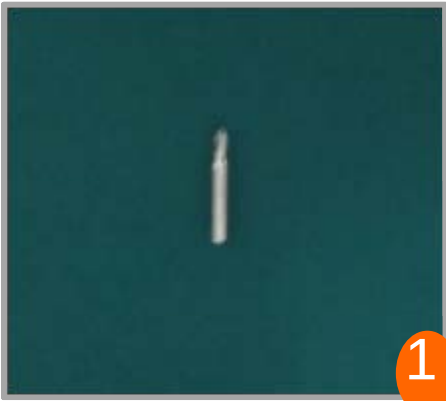

Disassembly Instruction



Remove 4 rubbers




Remove 4 screws

Disassembly Instruction



Disassembly Instruction

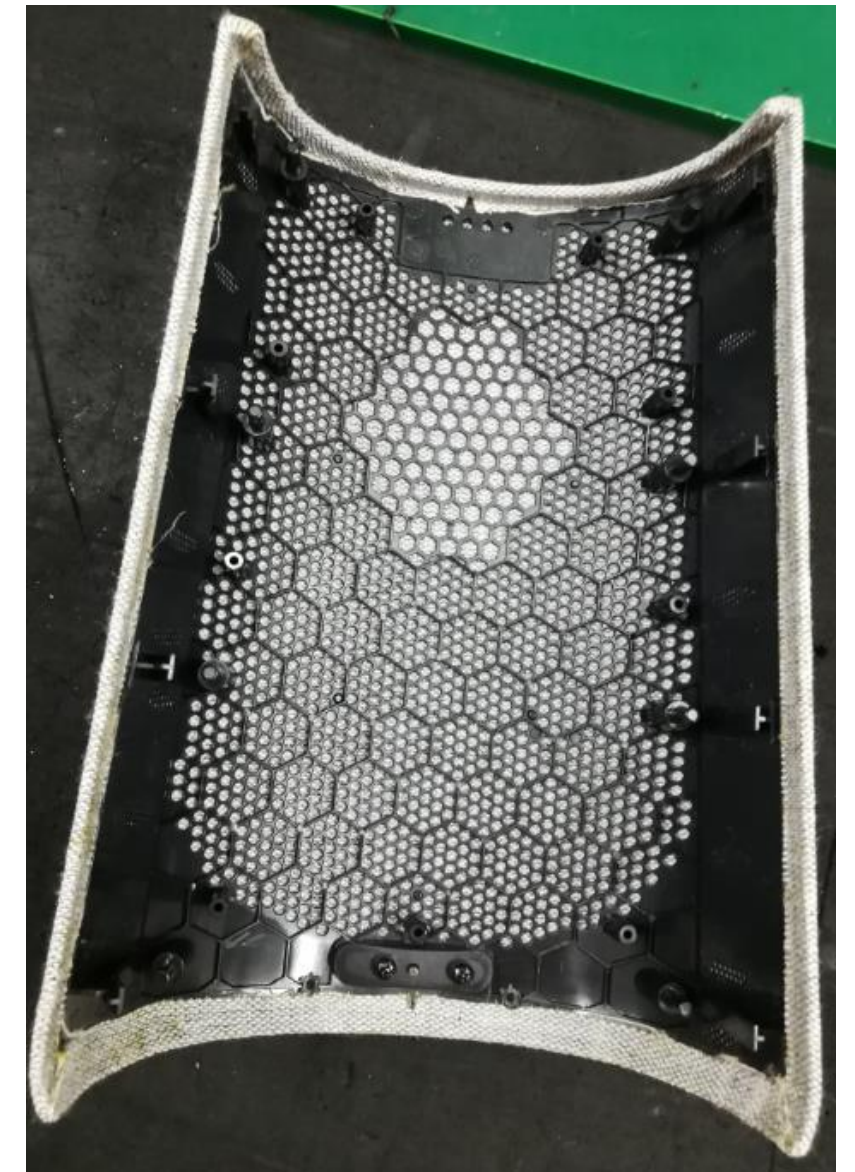


Disassembly Instruction

4 screws



Other 4 screws

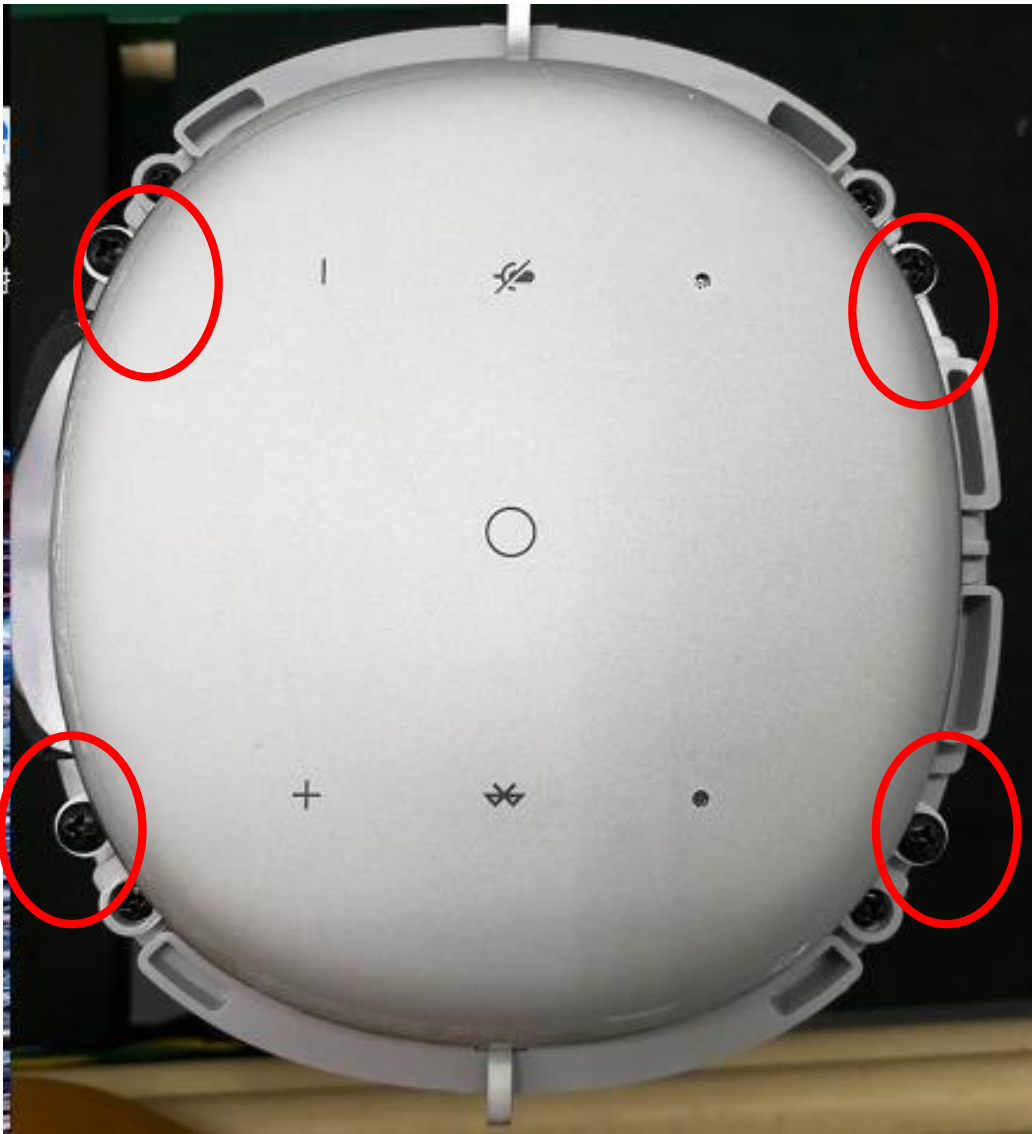

Disassembly Instruction



4pieces Google LEDs board



Disassembly Instruction




Disassembly Instruction




10 screws

Disassembly Instruction Pictures

Split the unit

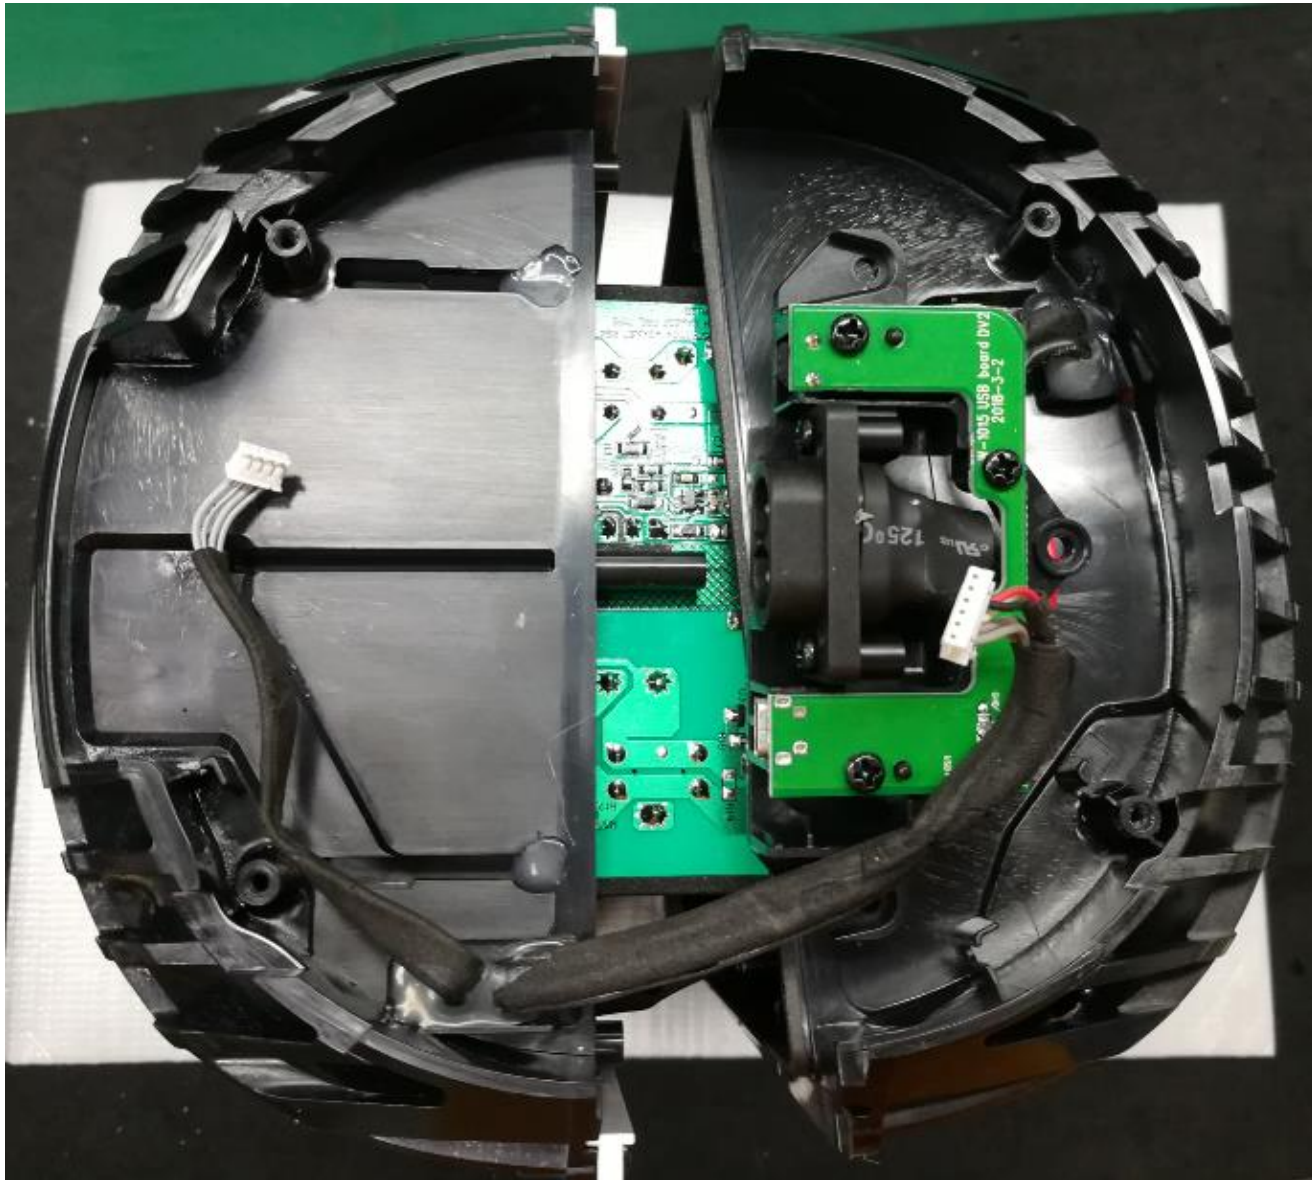


open the unit

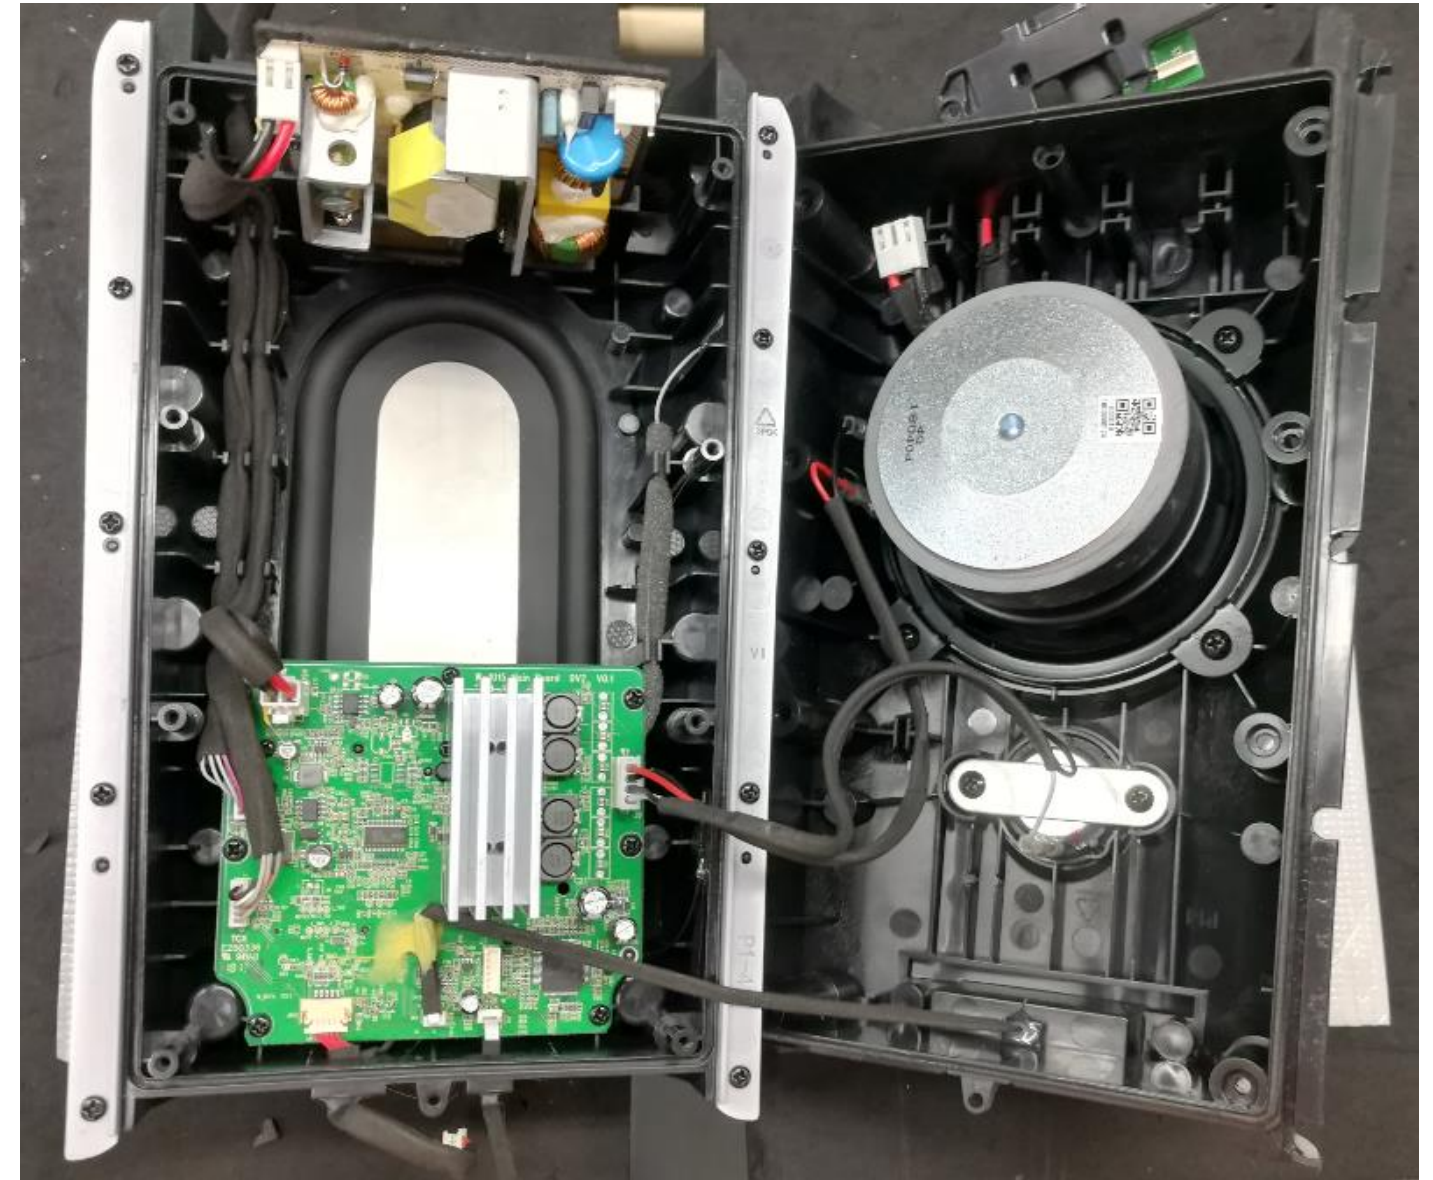


Disassembly Instruction Pictures

6 screws to speaker

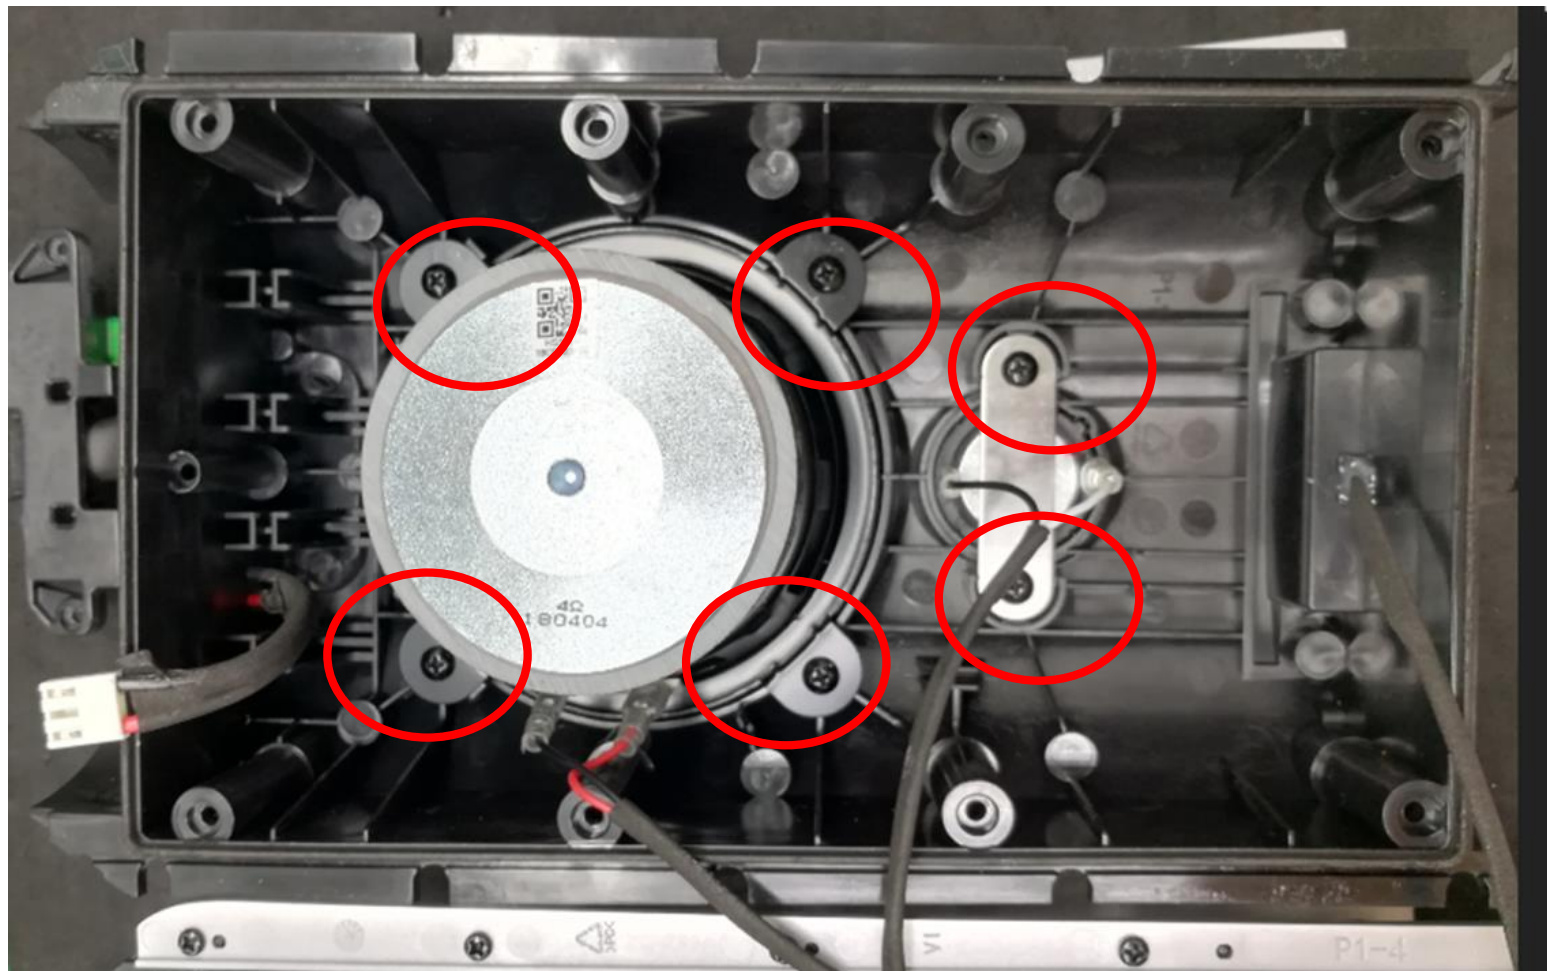


8 screws to main board

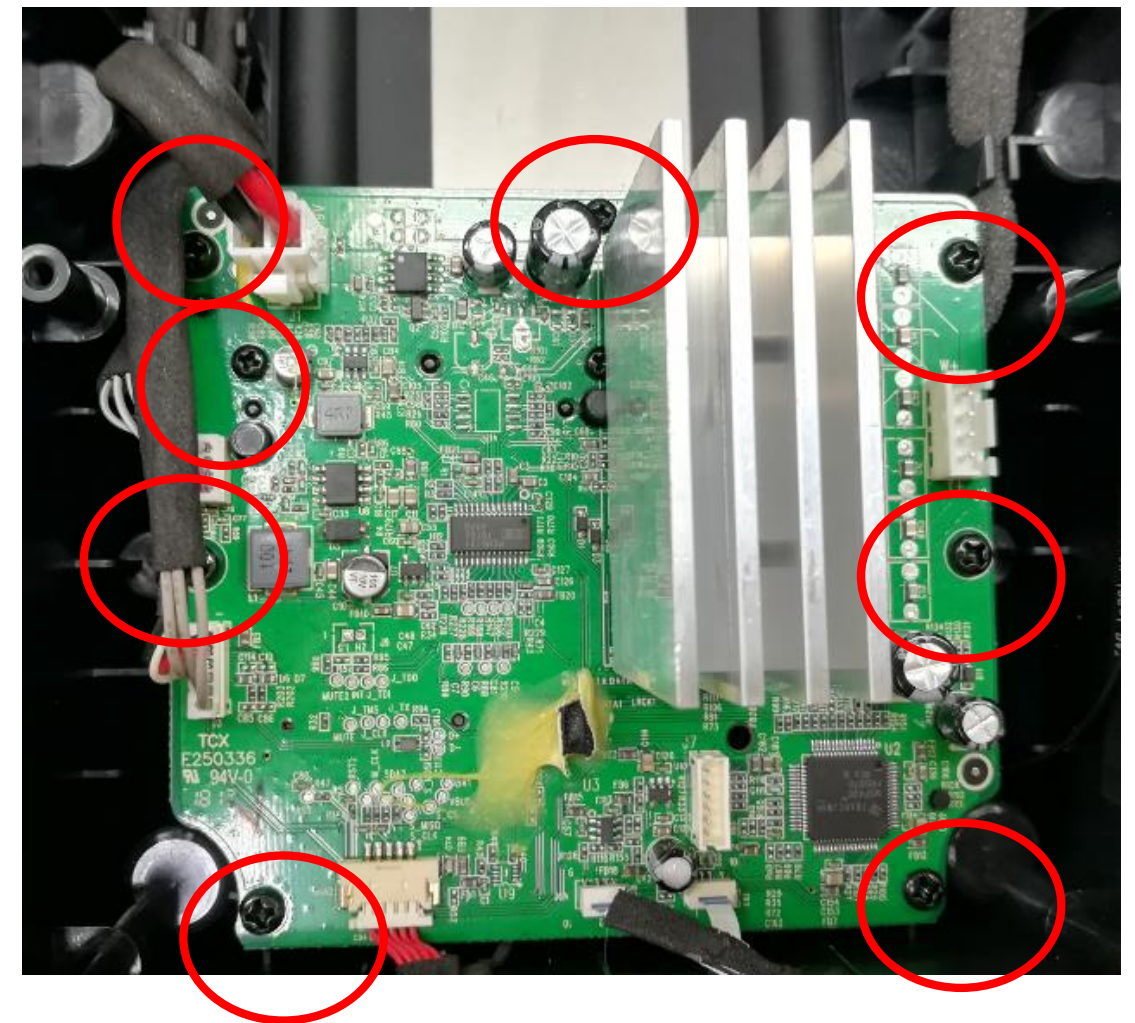

Disassembly Instruction Pictures

8 screws to disassembly main board

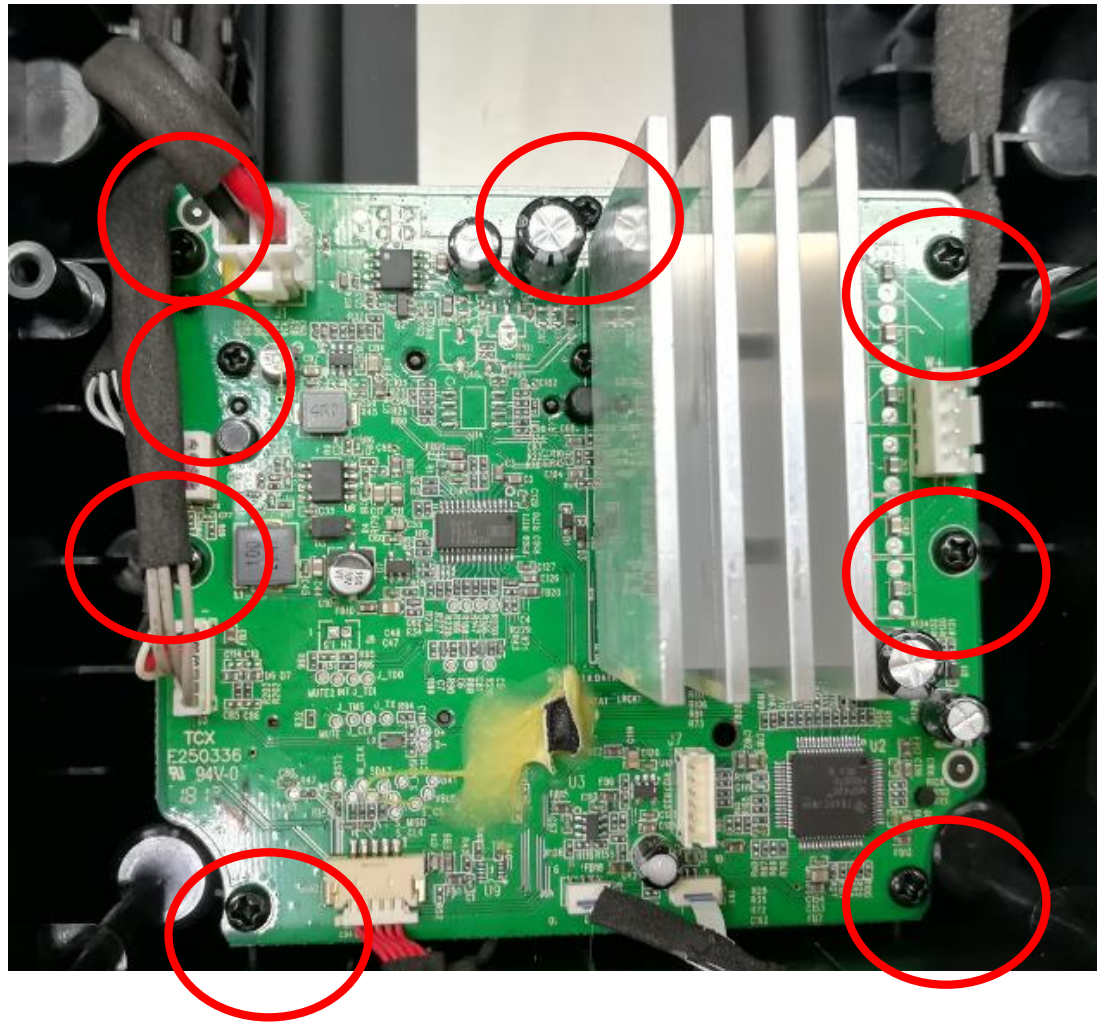

Main board with WIFI model



Disassembly Instruction PCBA board Pictures

2 screws for power board



3 screws for USB socket board




2 screws for WIFI board

Special process for the sub-assembly top panel

Aluminum Top panel with PCBA, only
below part, which is no function.



MIC PCBA board

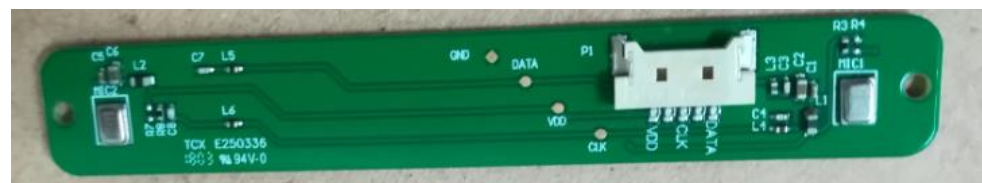


Special process for the sub-assembly top panel


1. If Top panel keys no function, then must need change below total sub-assembly part.




2. If only Mic no function, then just need change below MIC PCBA

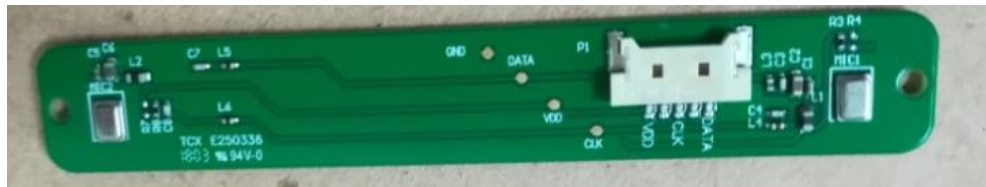


BLOCK DIAGRAM

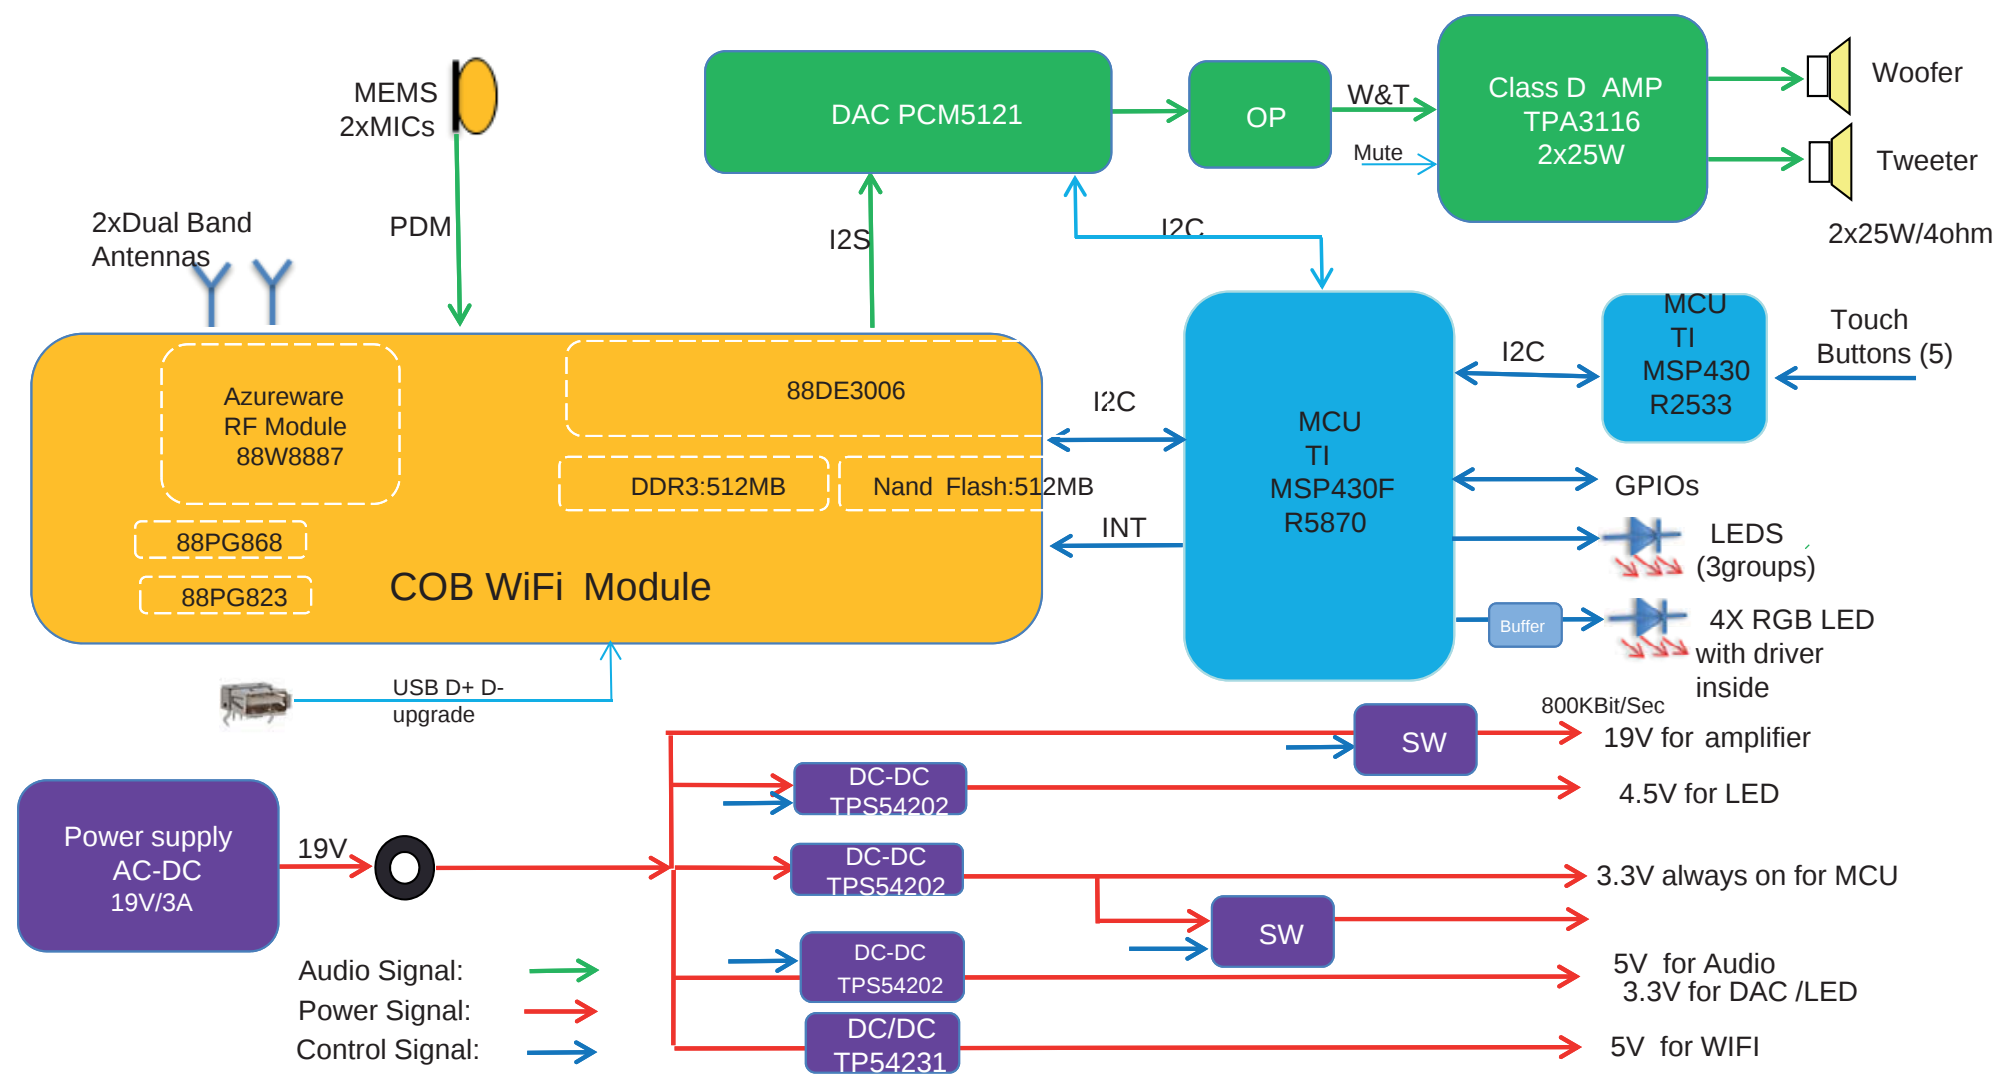



AUDIO PATH FOR VOICE & HPF

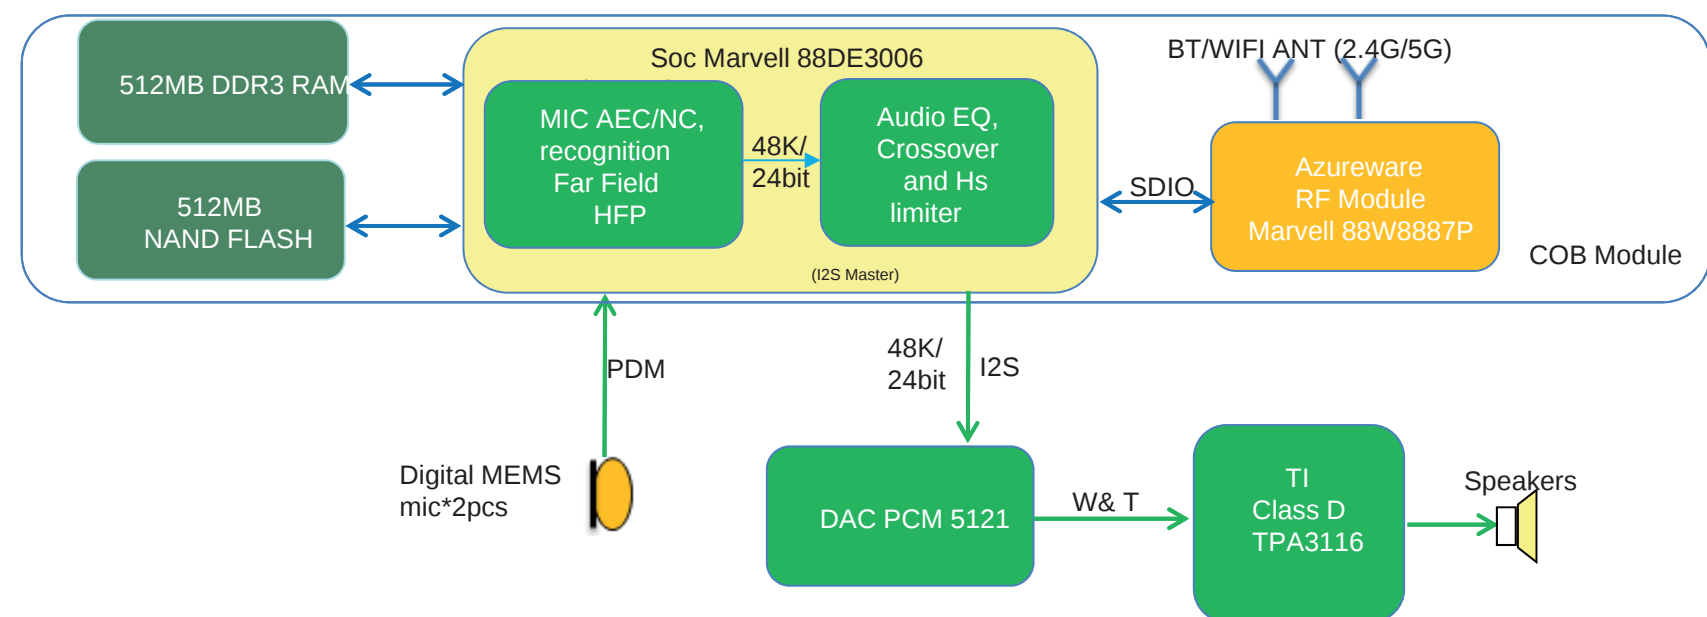


WIRING DIAGRAM

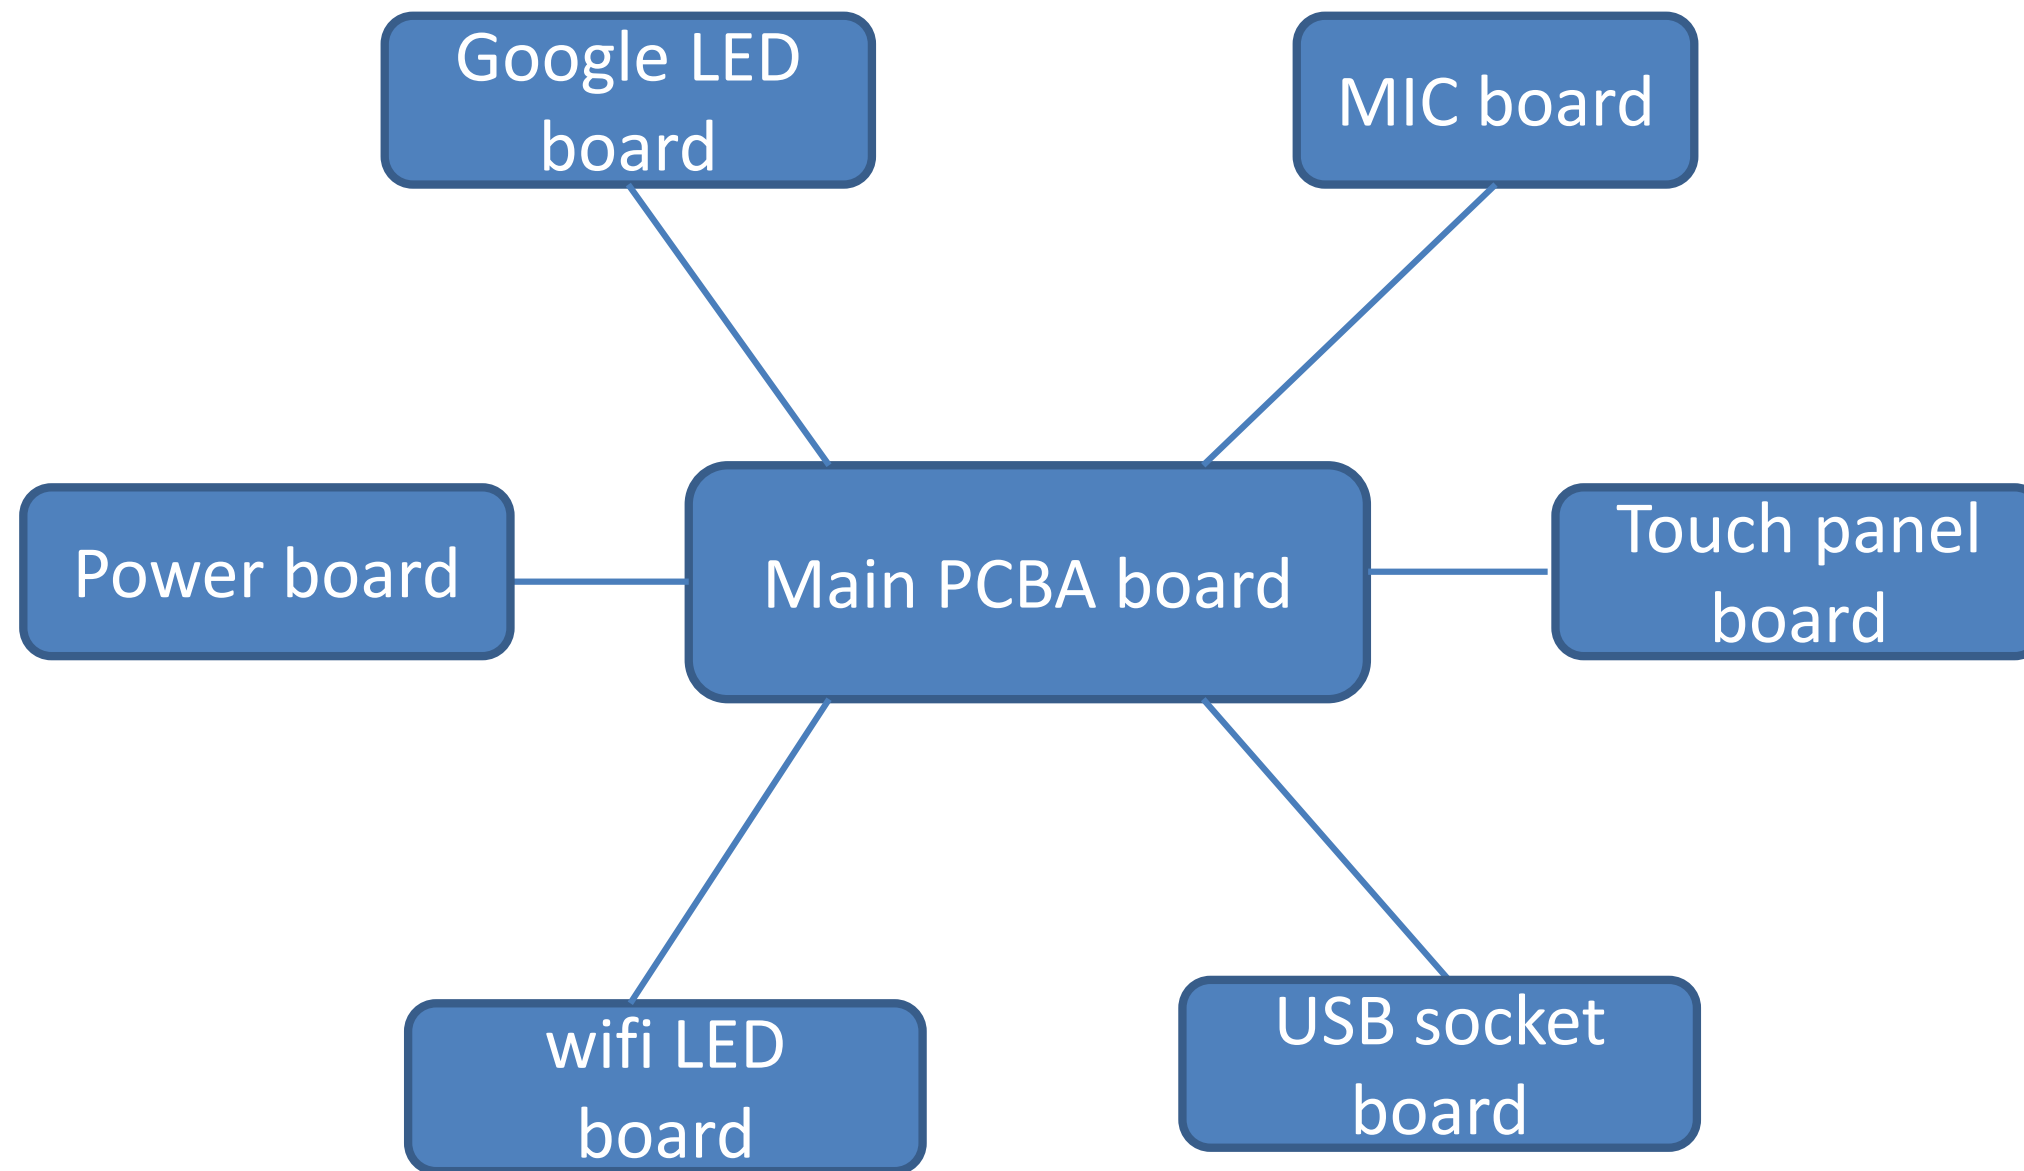


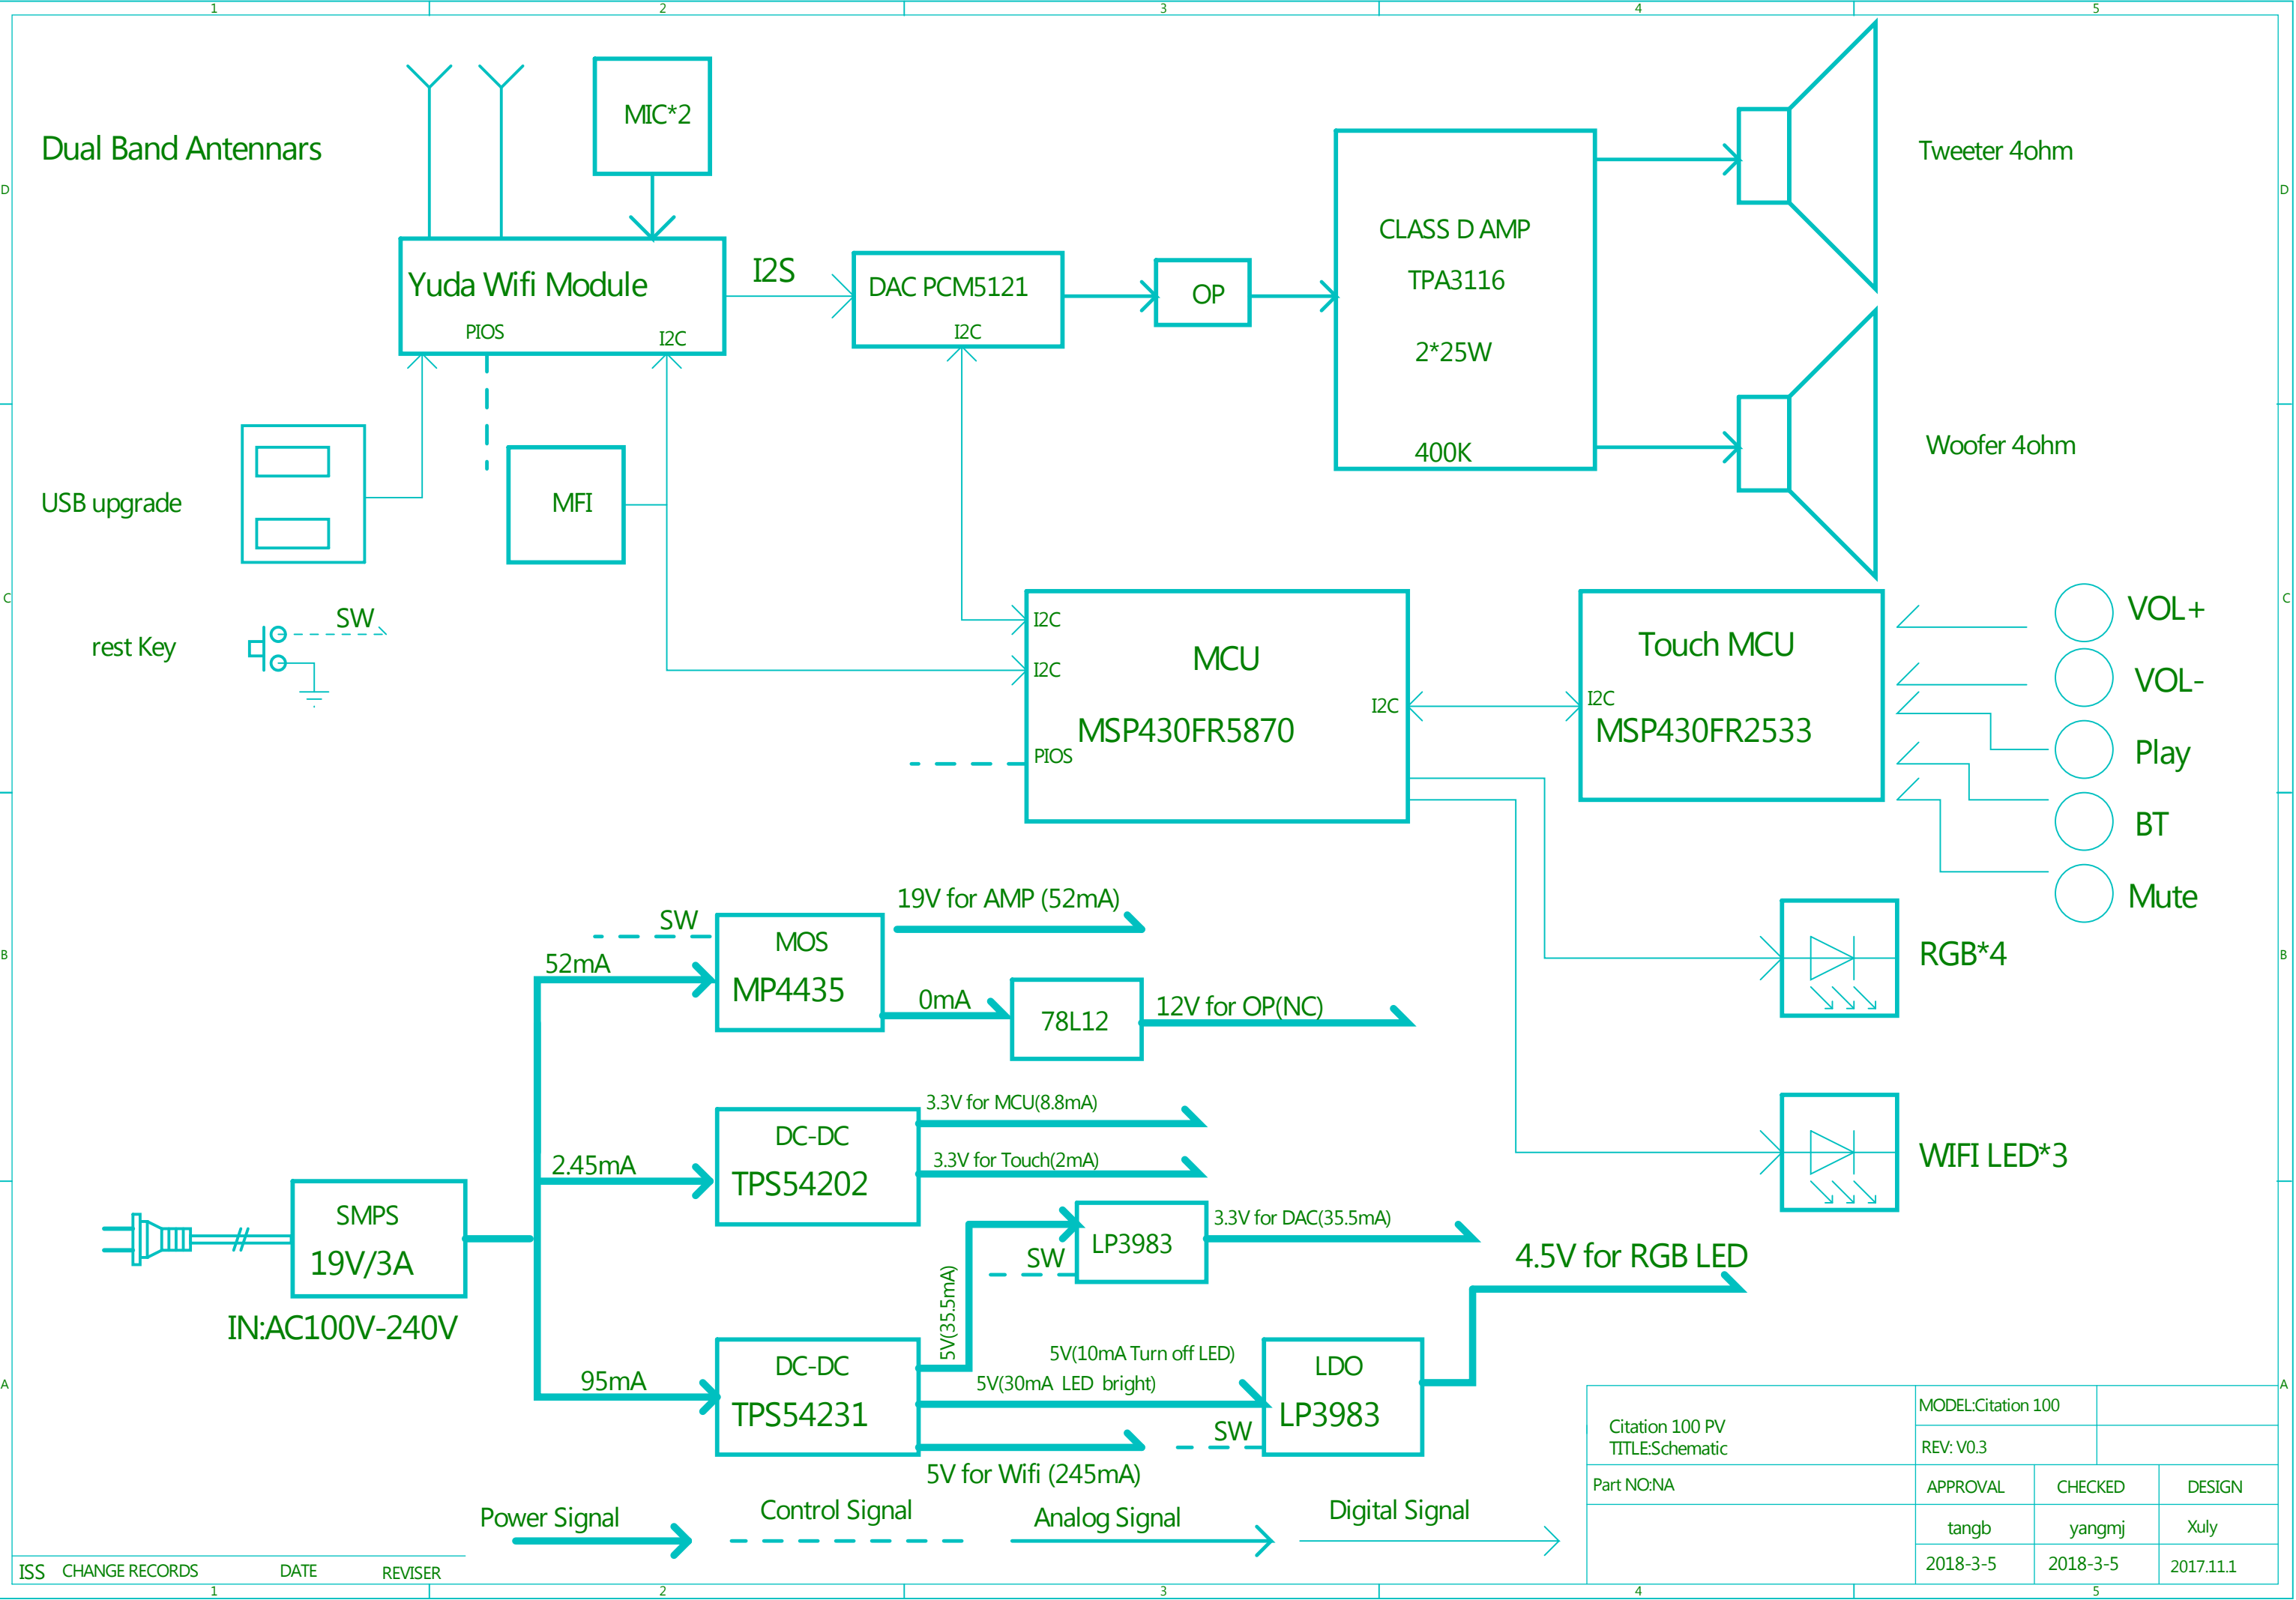

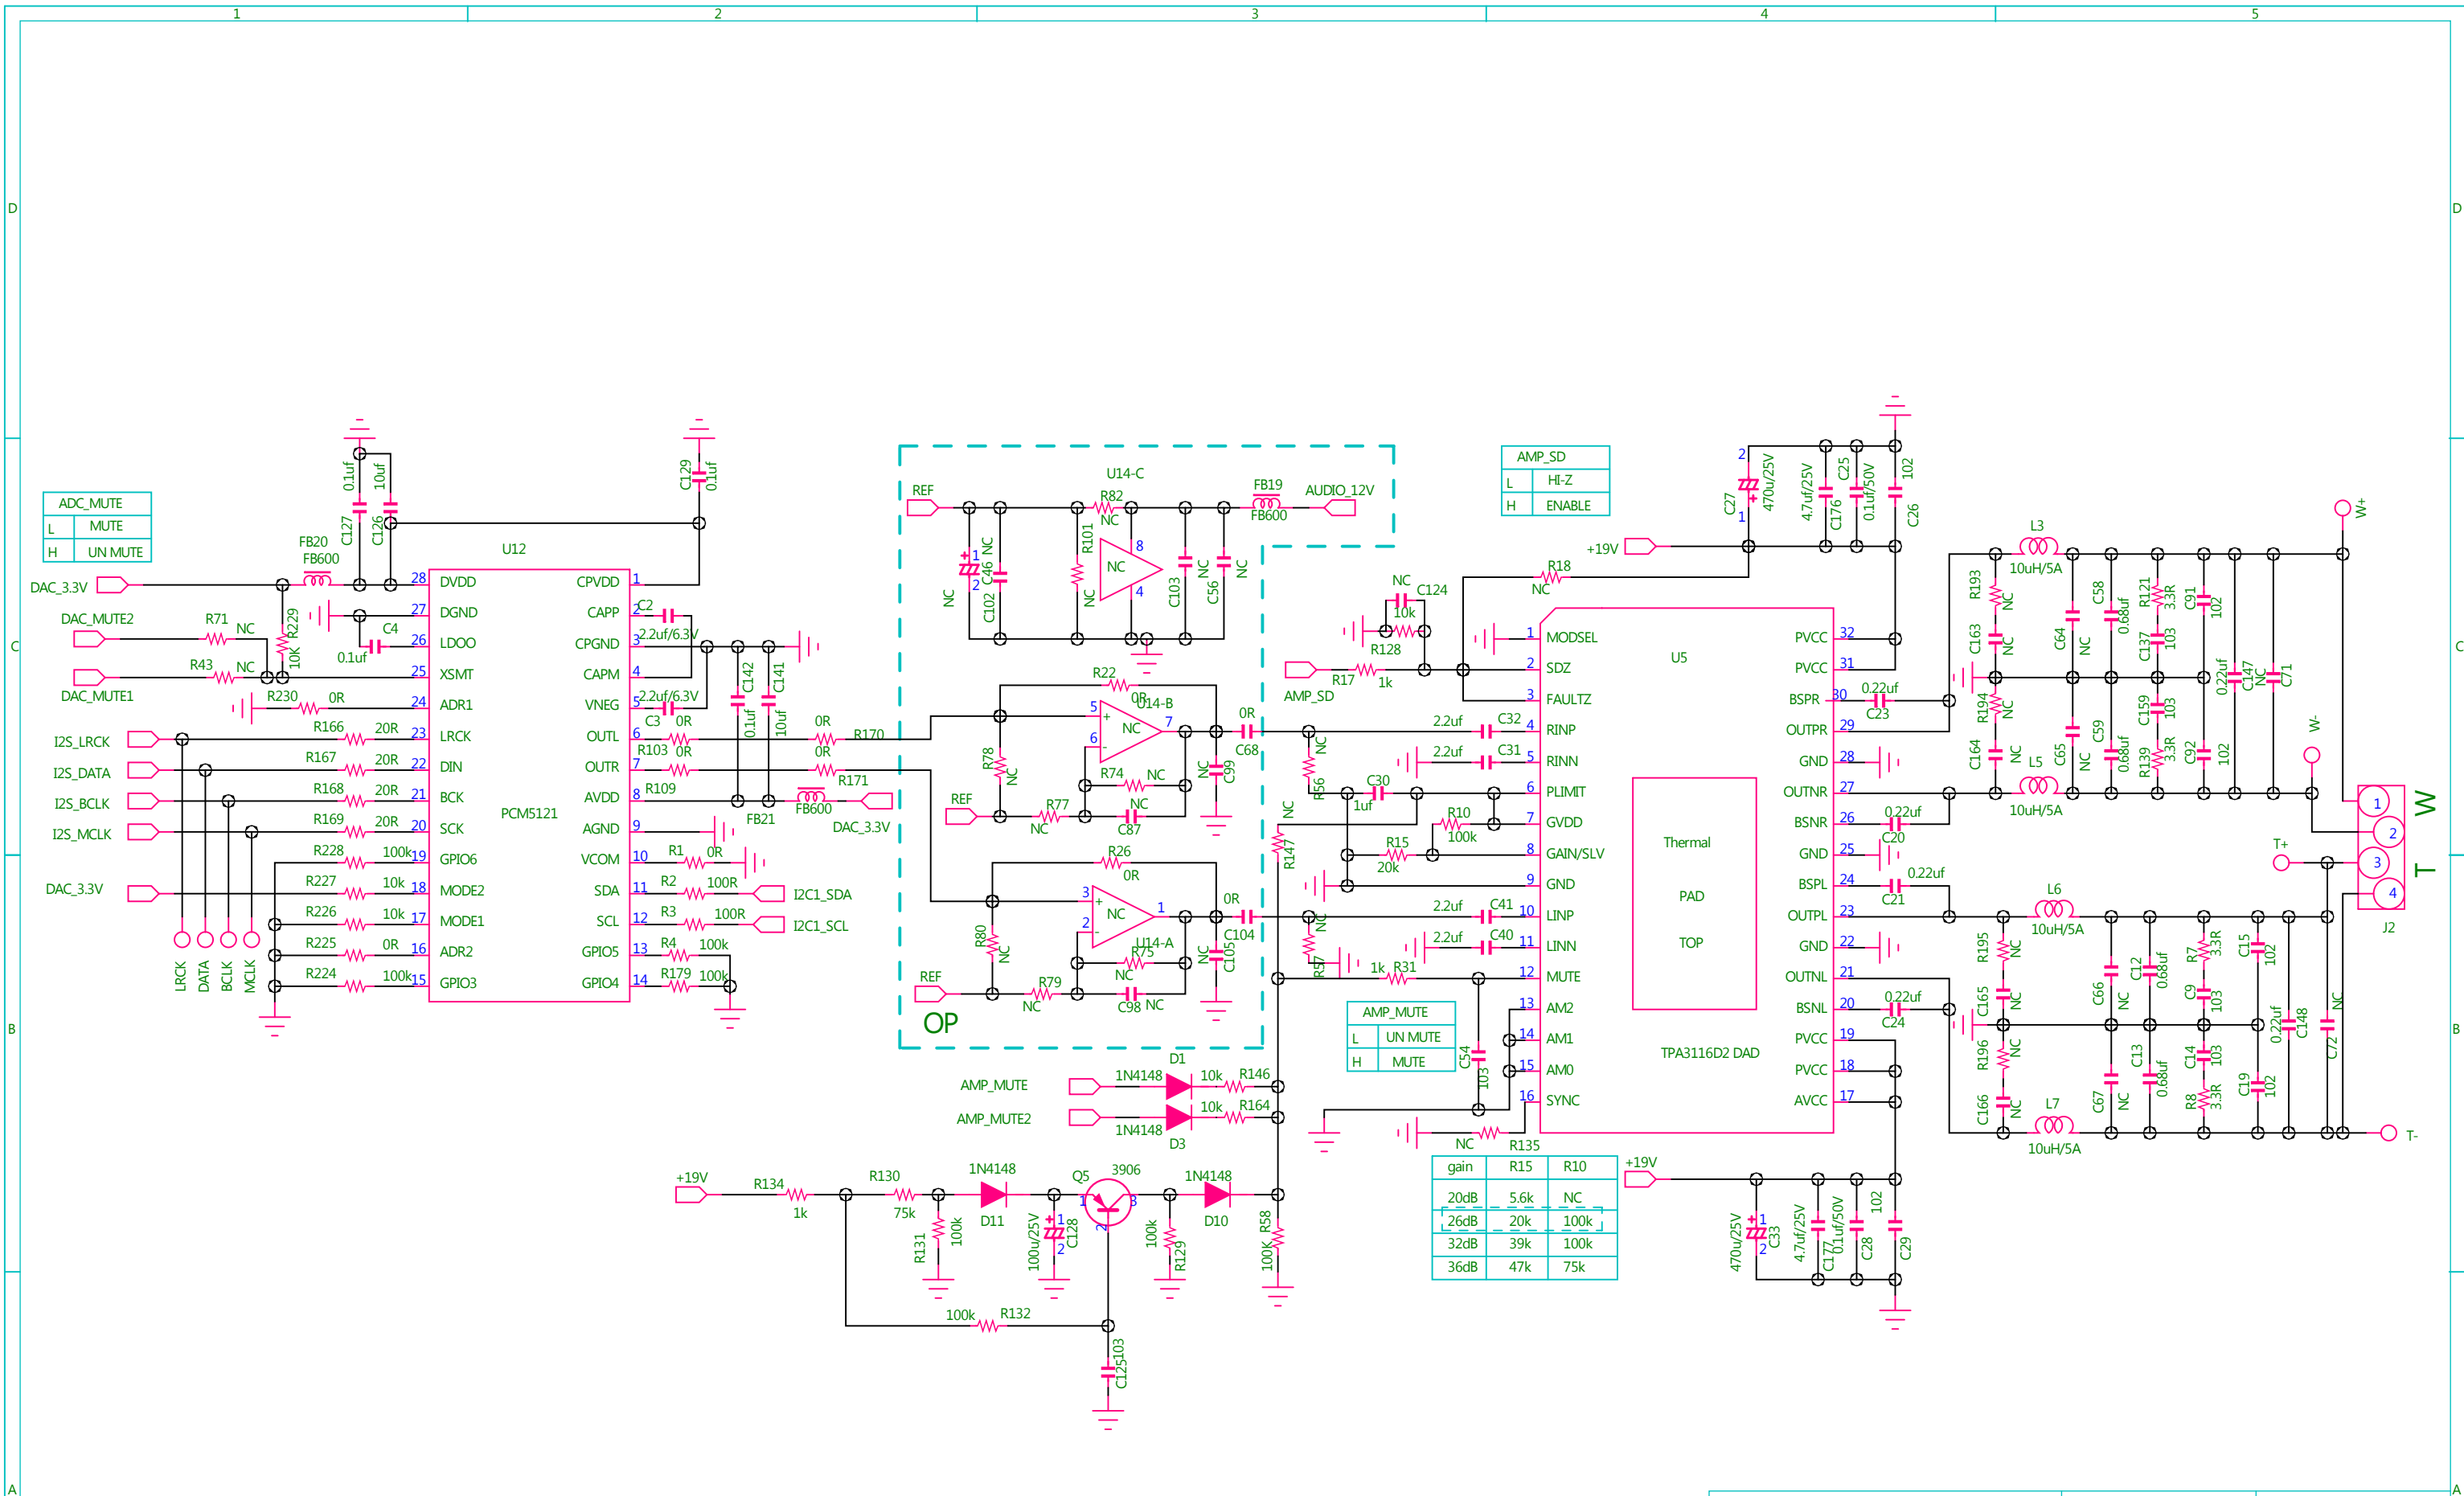


Citation 100 Auido AMP PV TITLE:Schematic	MODEL:Citation 100		SCALE: FREE	
	REV: V0.3		SHEET: 2/5	
Part NO:NA	APPROVAL	CHECKED	DESIGN	
	tangb	yangmj	Xuly	
	2018-3-5	2018-3-5	2017.11.1	

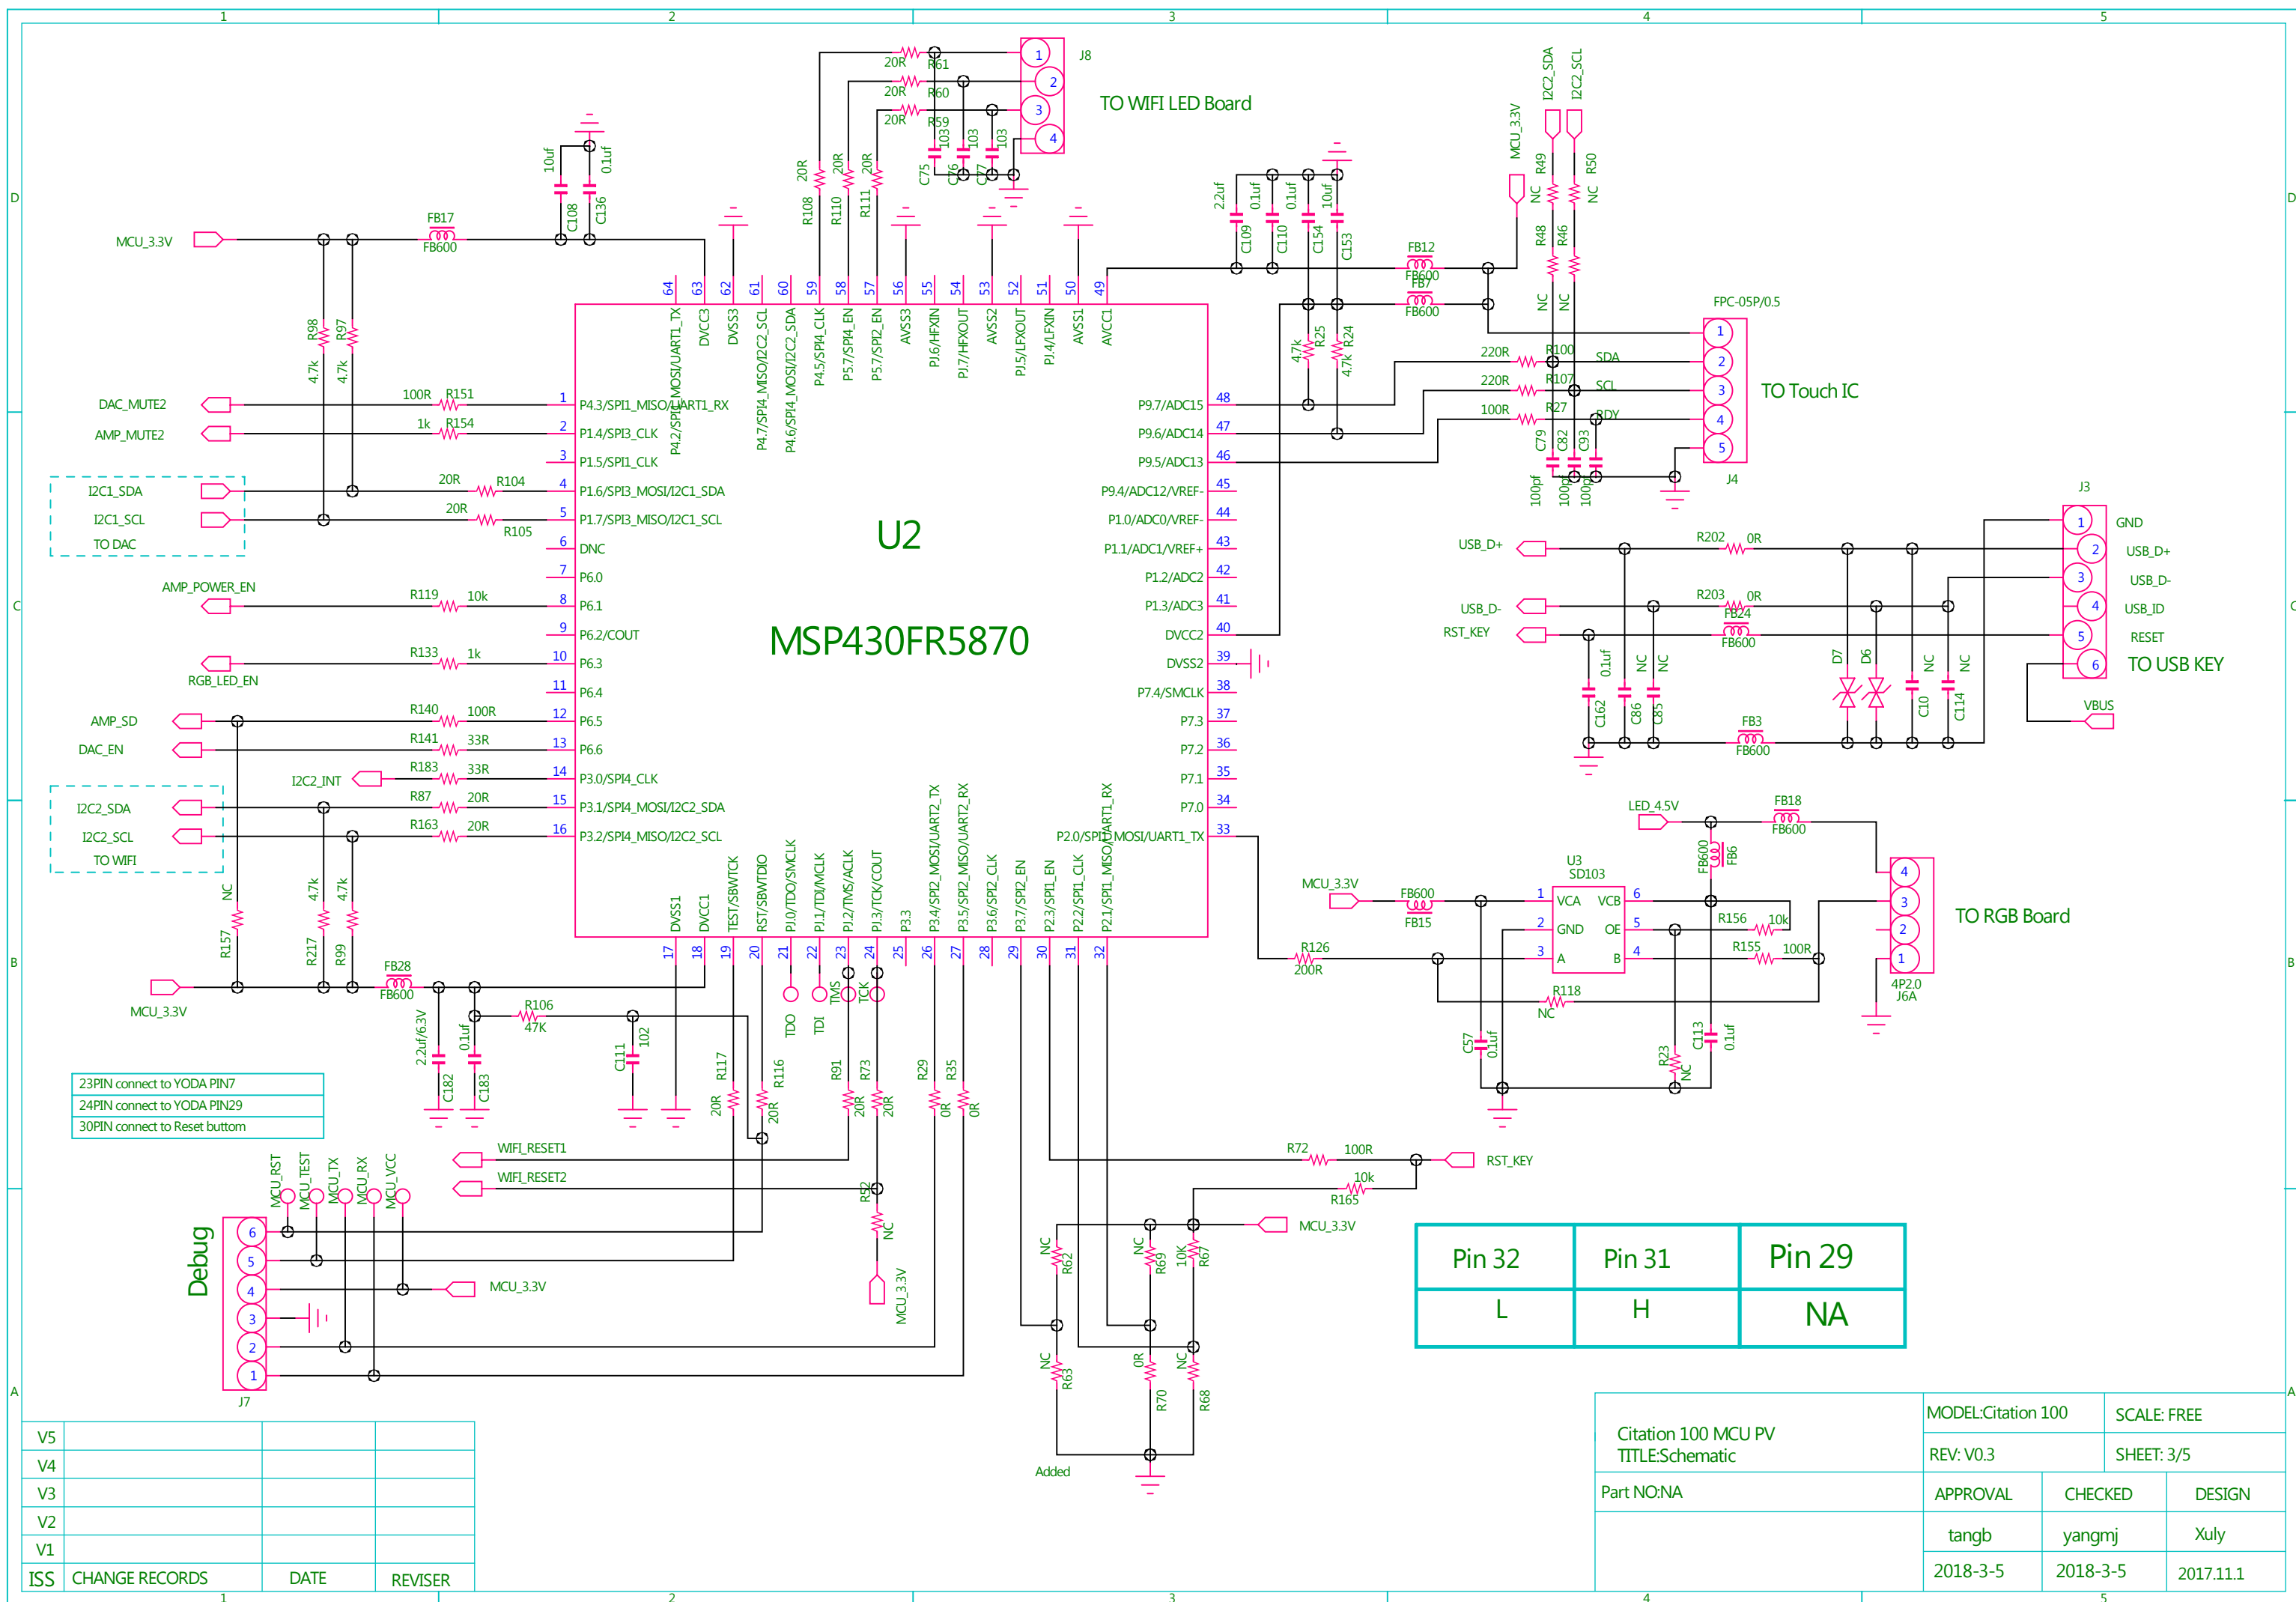

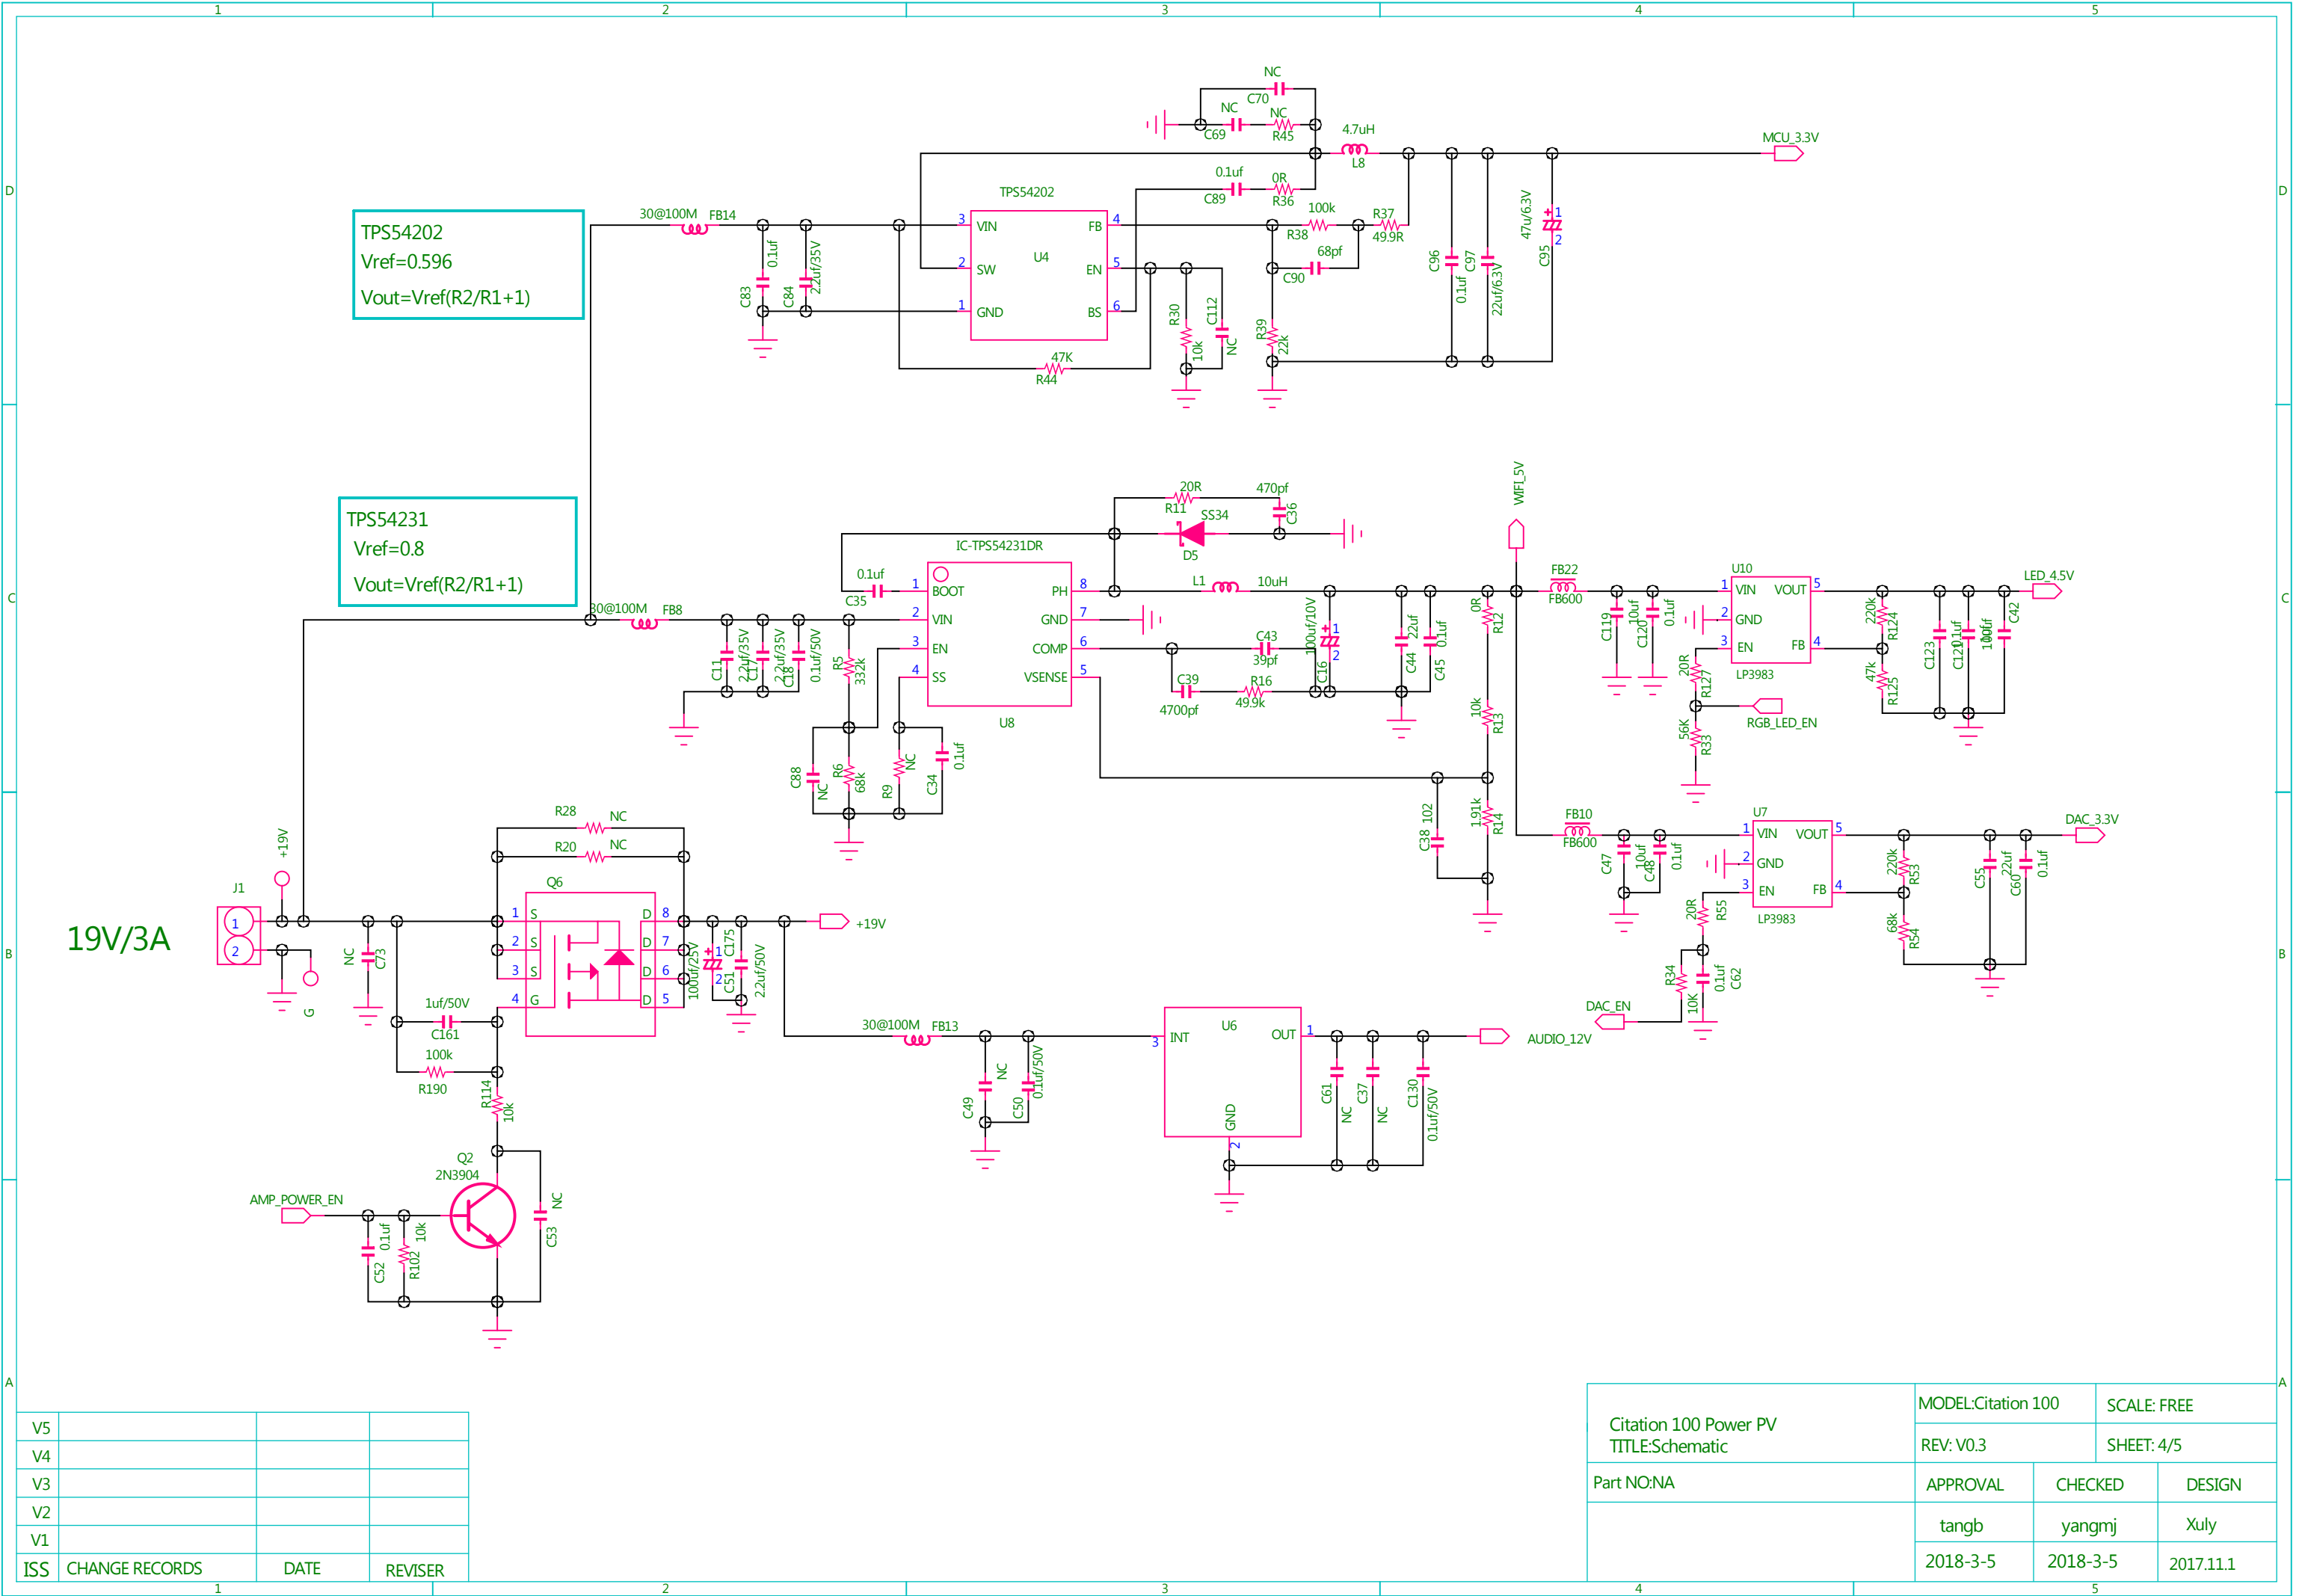


V5			
V4			
V3			
V2			
V1			
ISS	CHANGE RECORDS	DATE	REVISER


Citation 100 Power PV TITLE:Schematic	MODEL:Citation 100		SCALE: FREE
	REV: V0.3		SHEET: 4/5
Part NO:NA	APPROVAL	CHECKED	DESIGN
	tangb	yangmj	Xuly
	2018-3-5	2018-3-5	2017.11.1

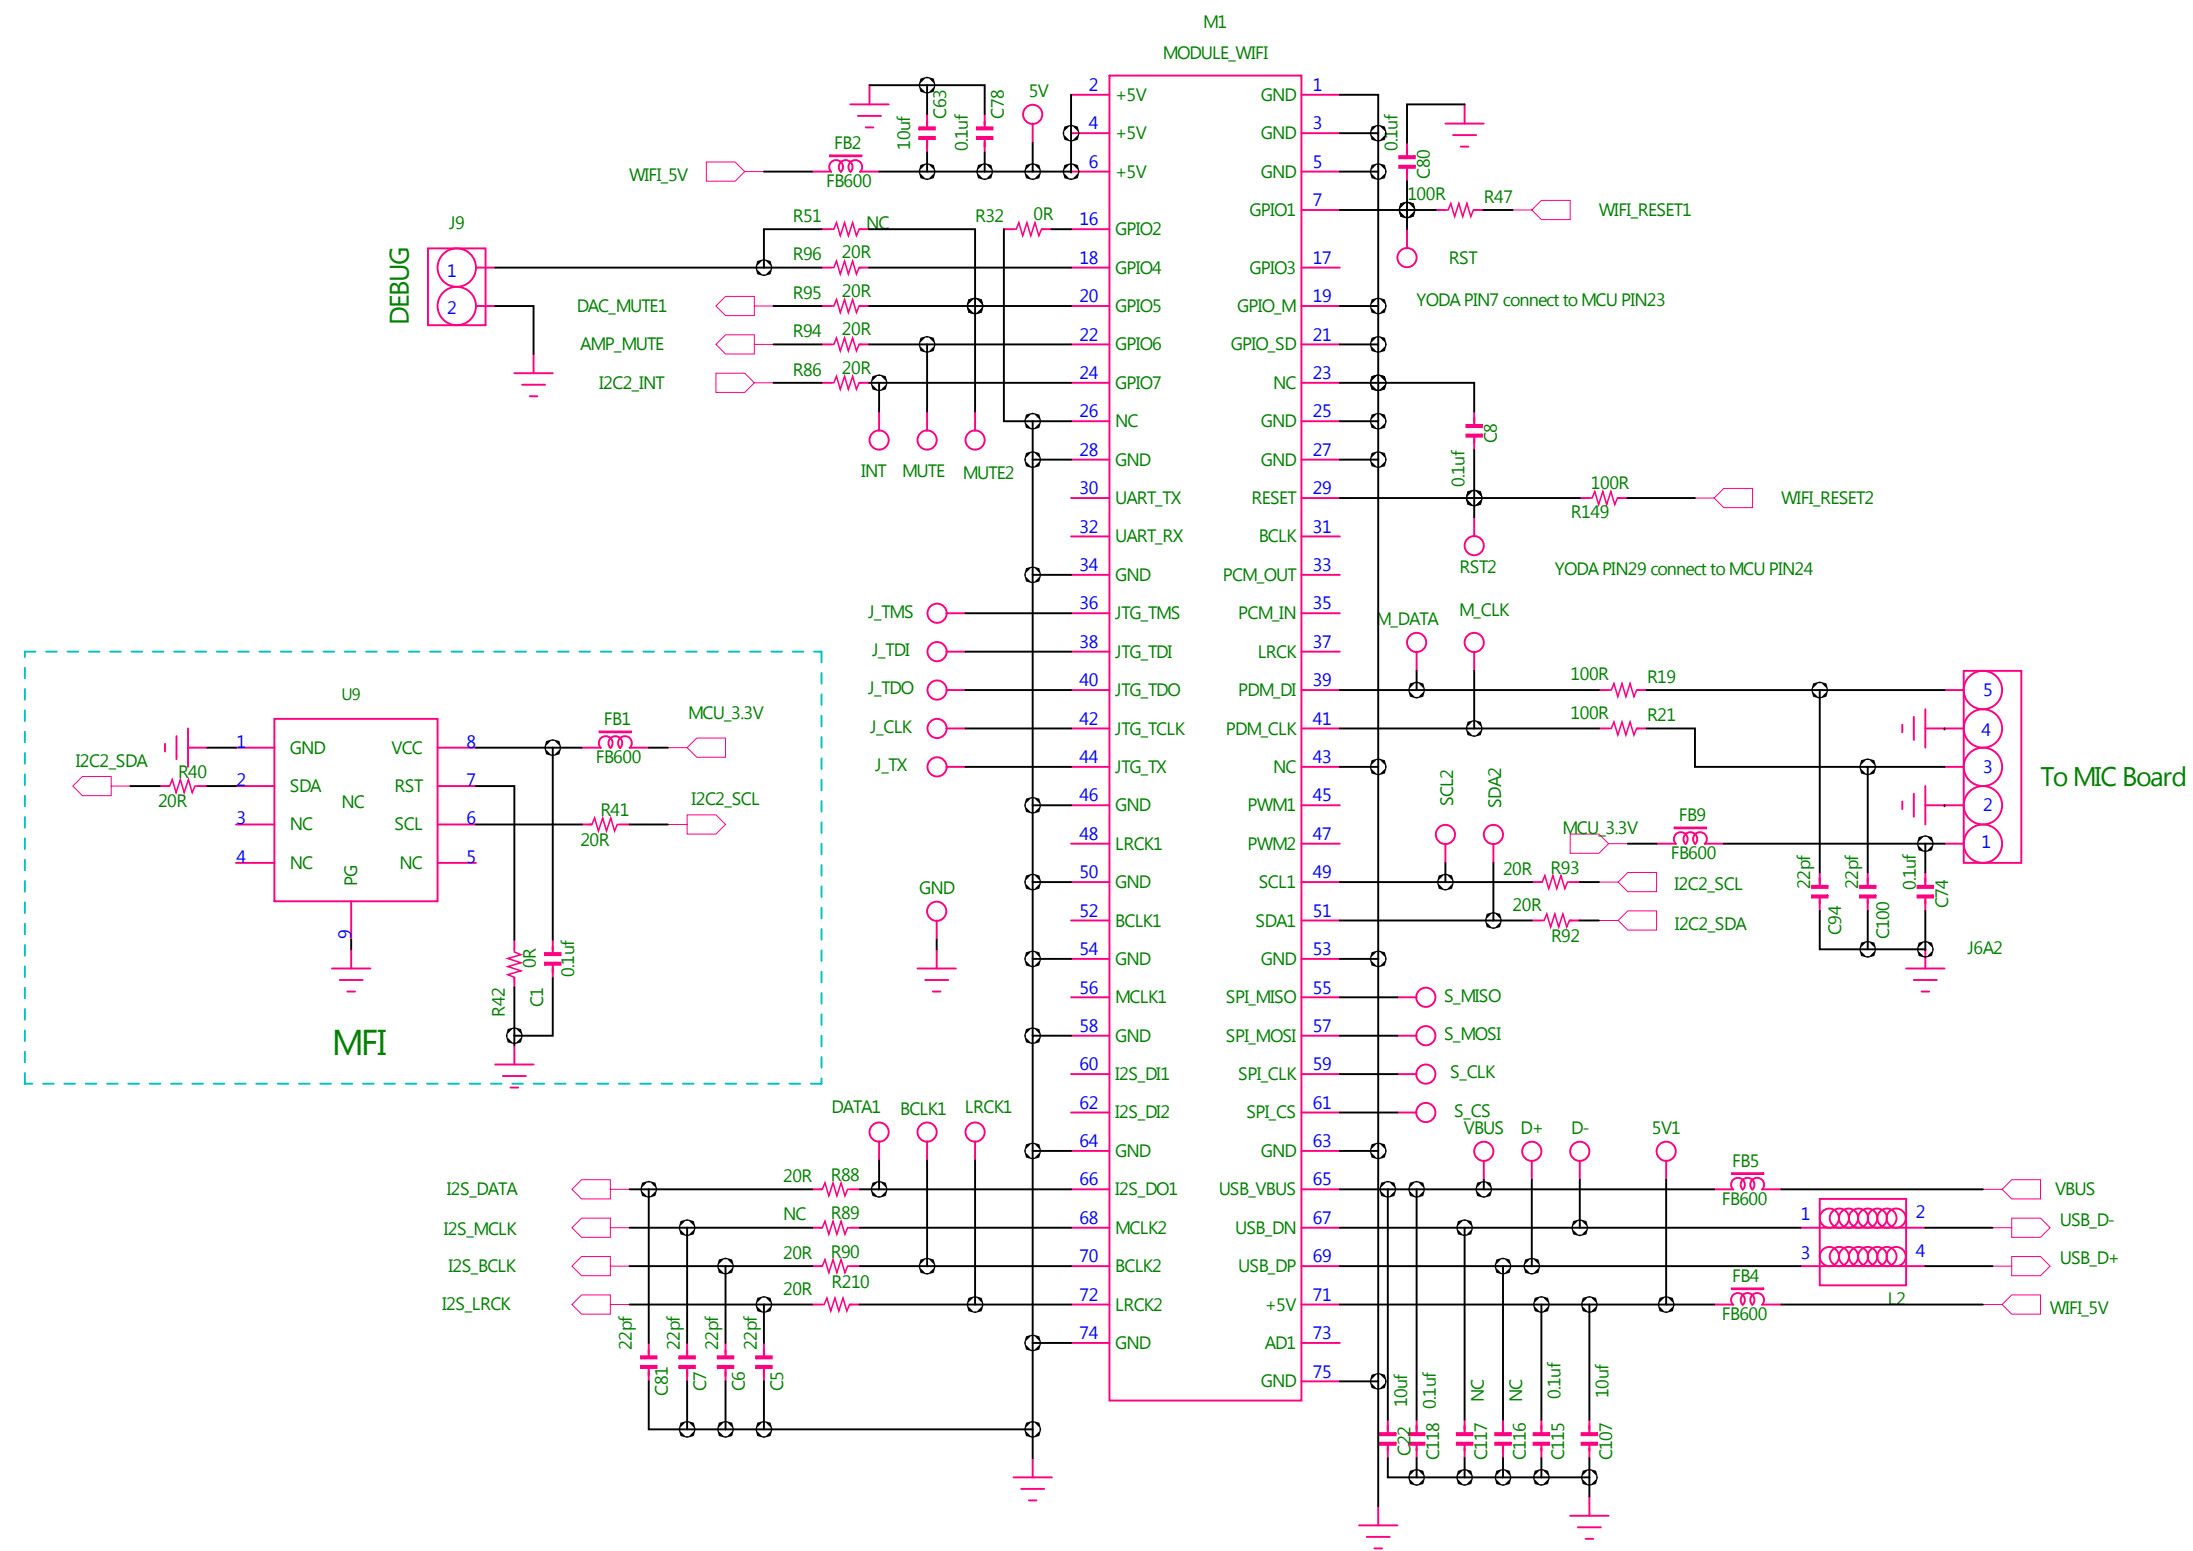


Citation 100 Wifi PV		MODEL:Citation 100		SCALE: FREE	
TITLE:Schematic		REV: V0.3		SHEET: 5/5	
Part NO:NA		APPROVAL	CHECKED	DESIGN	
		tangb	yangmj	Xuly	
		2018-3-5	2018-3-5	2017.11.1	


2018-4-26

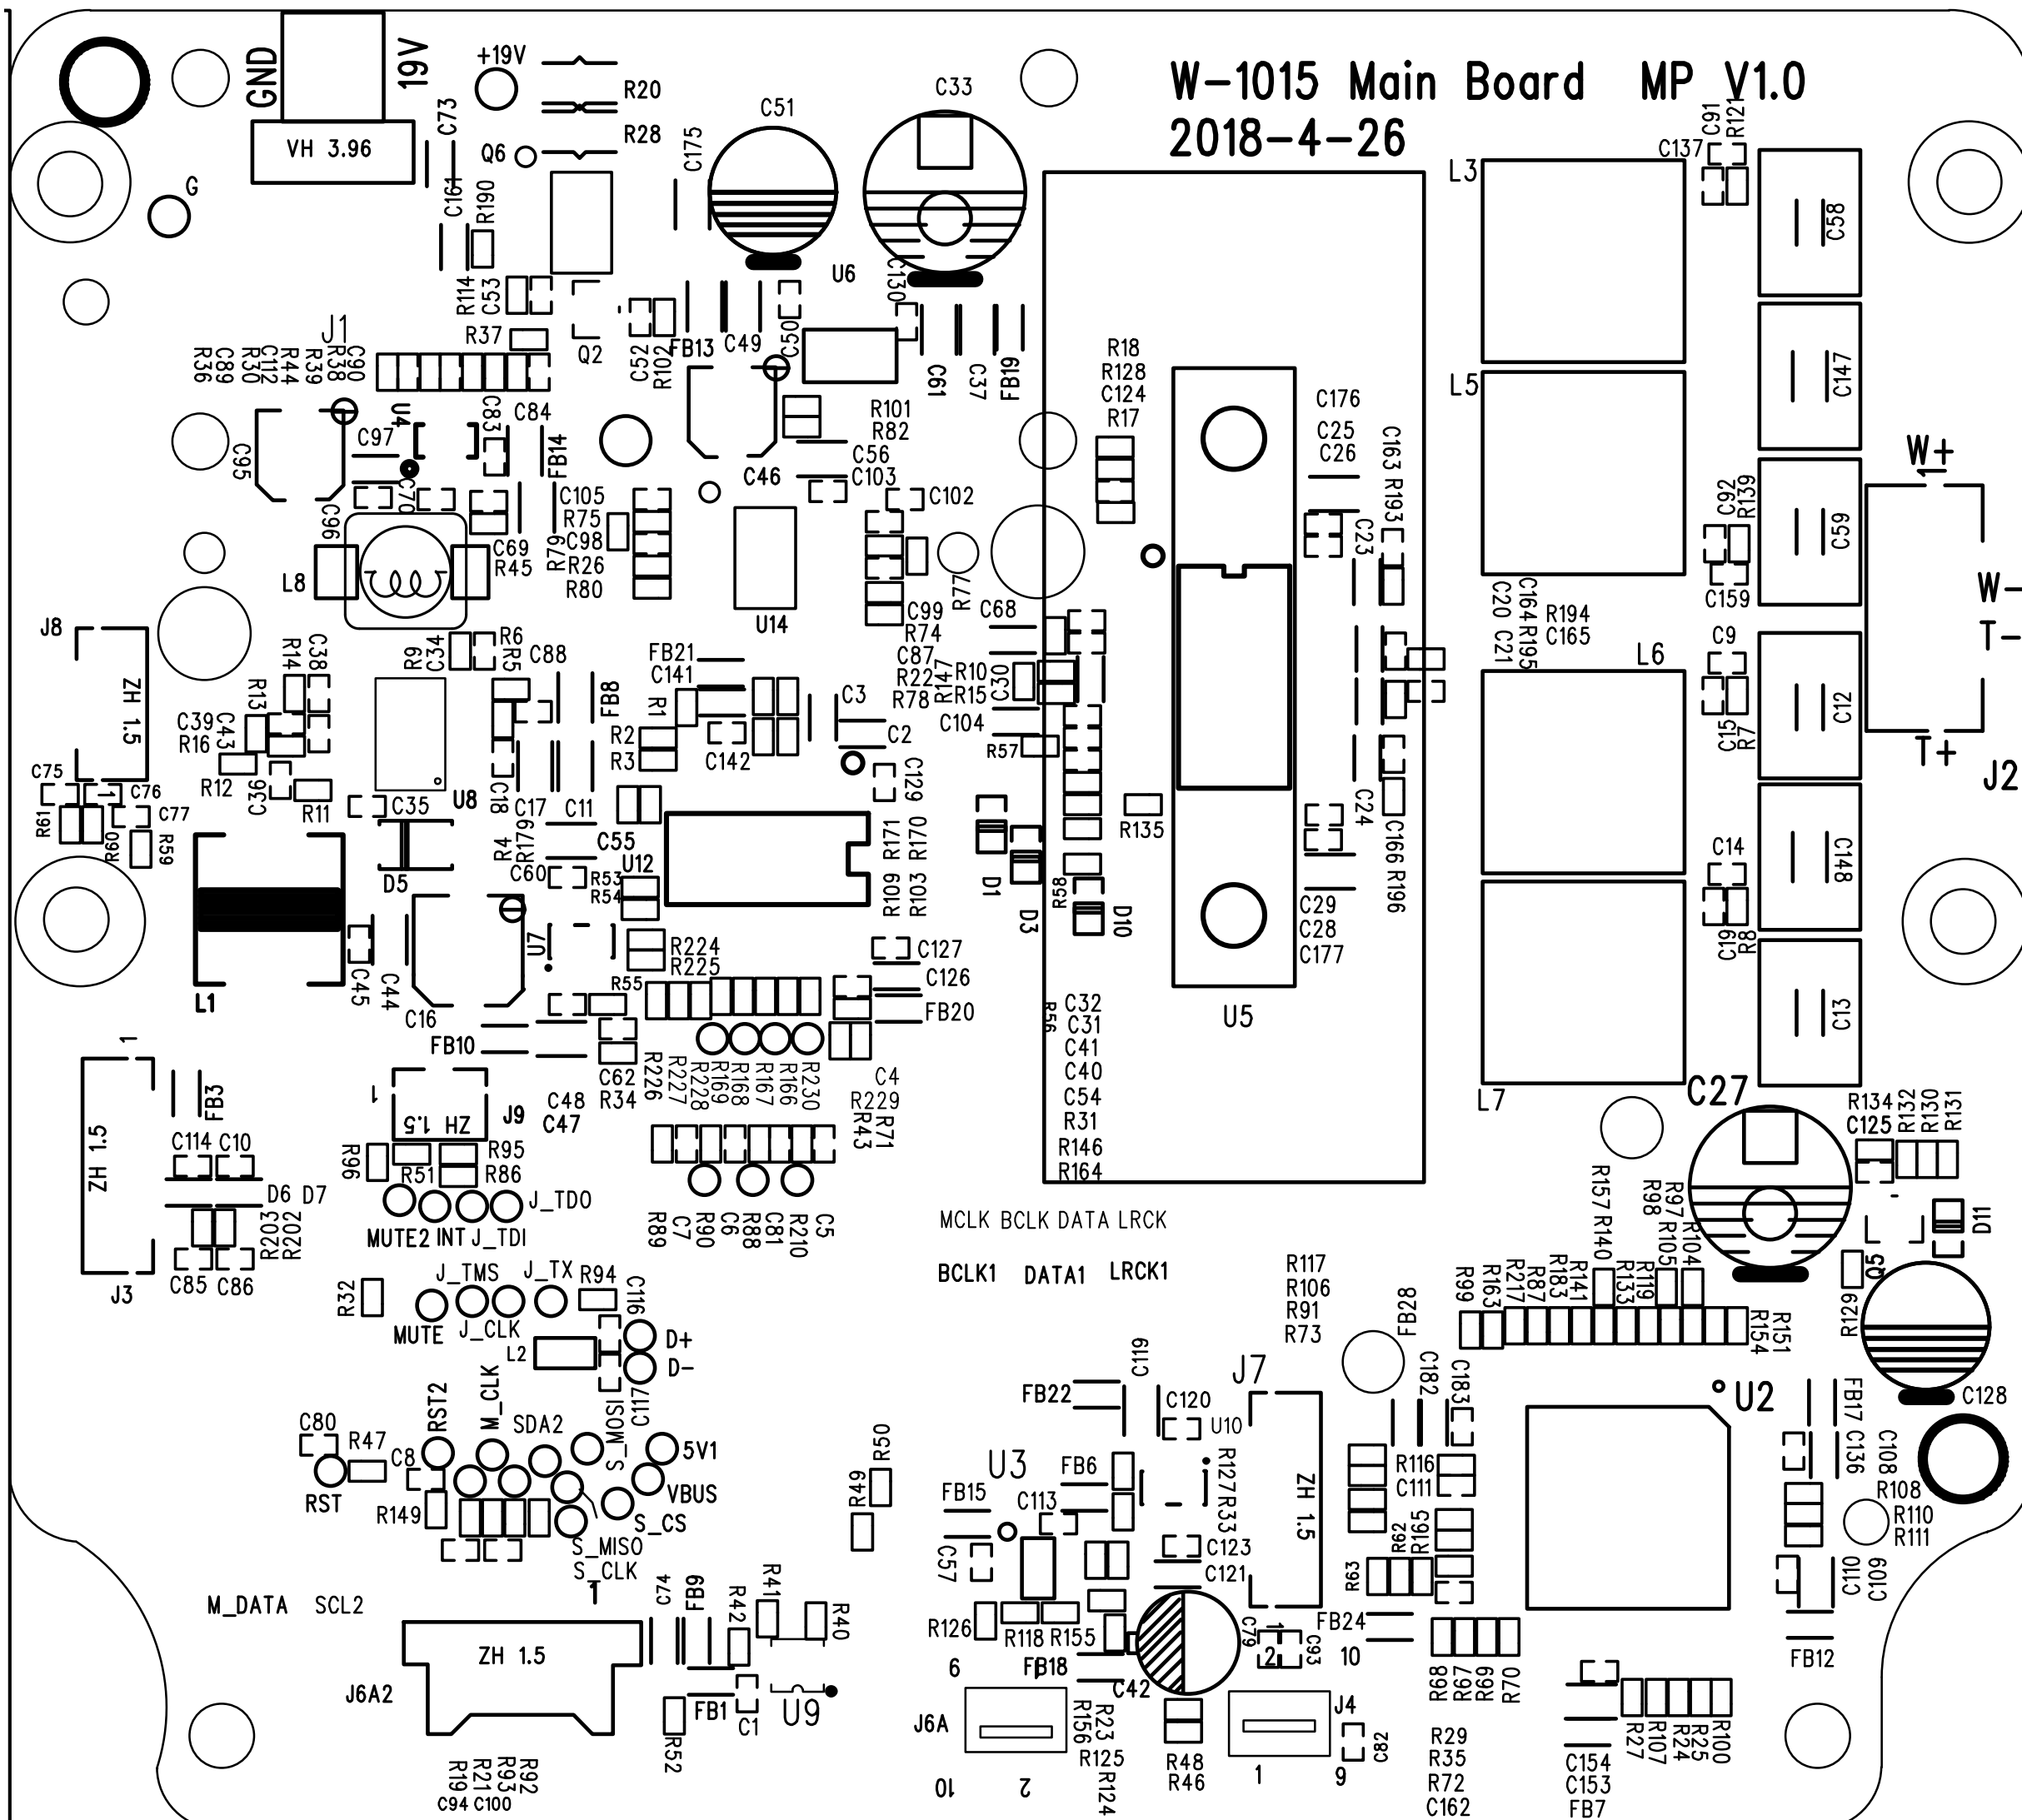

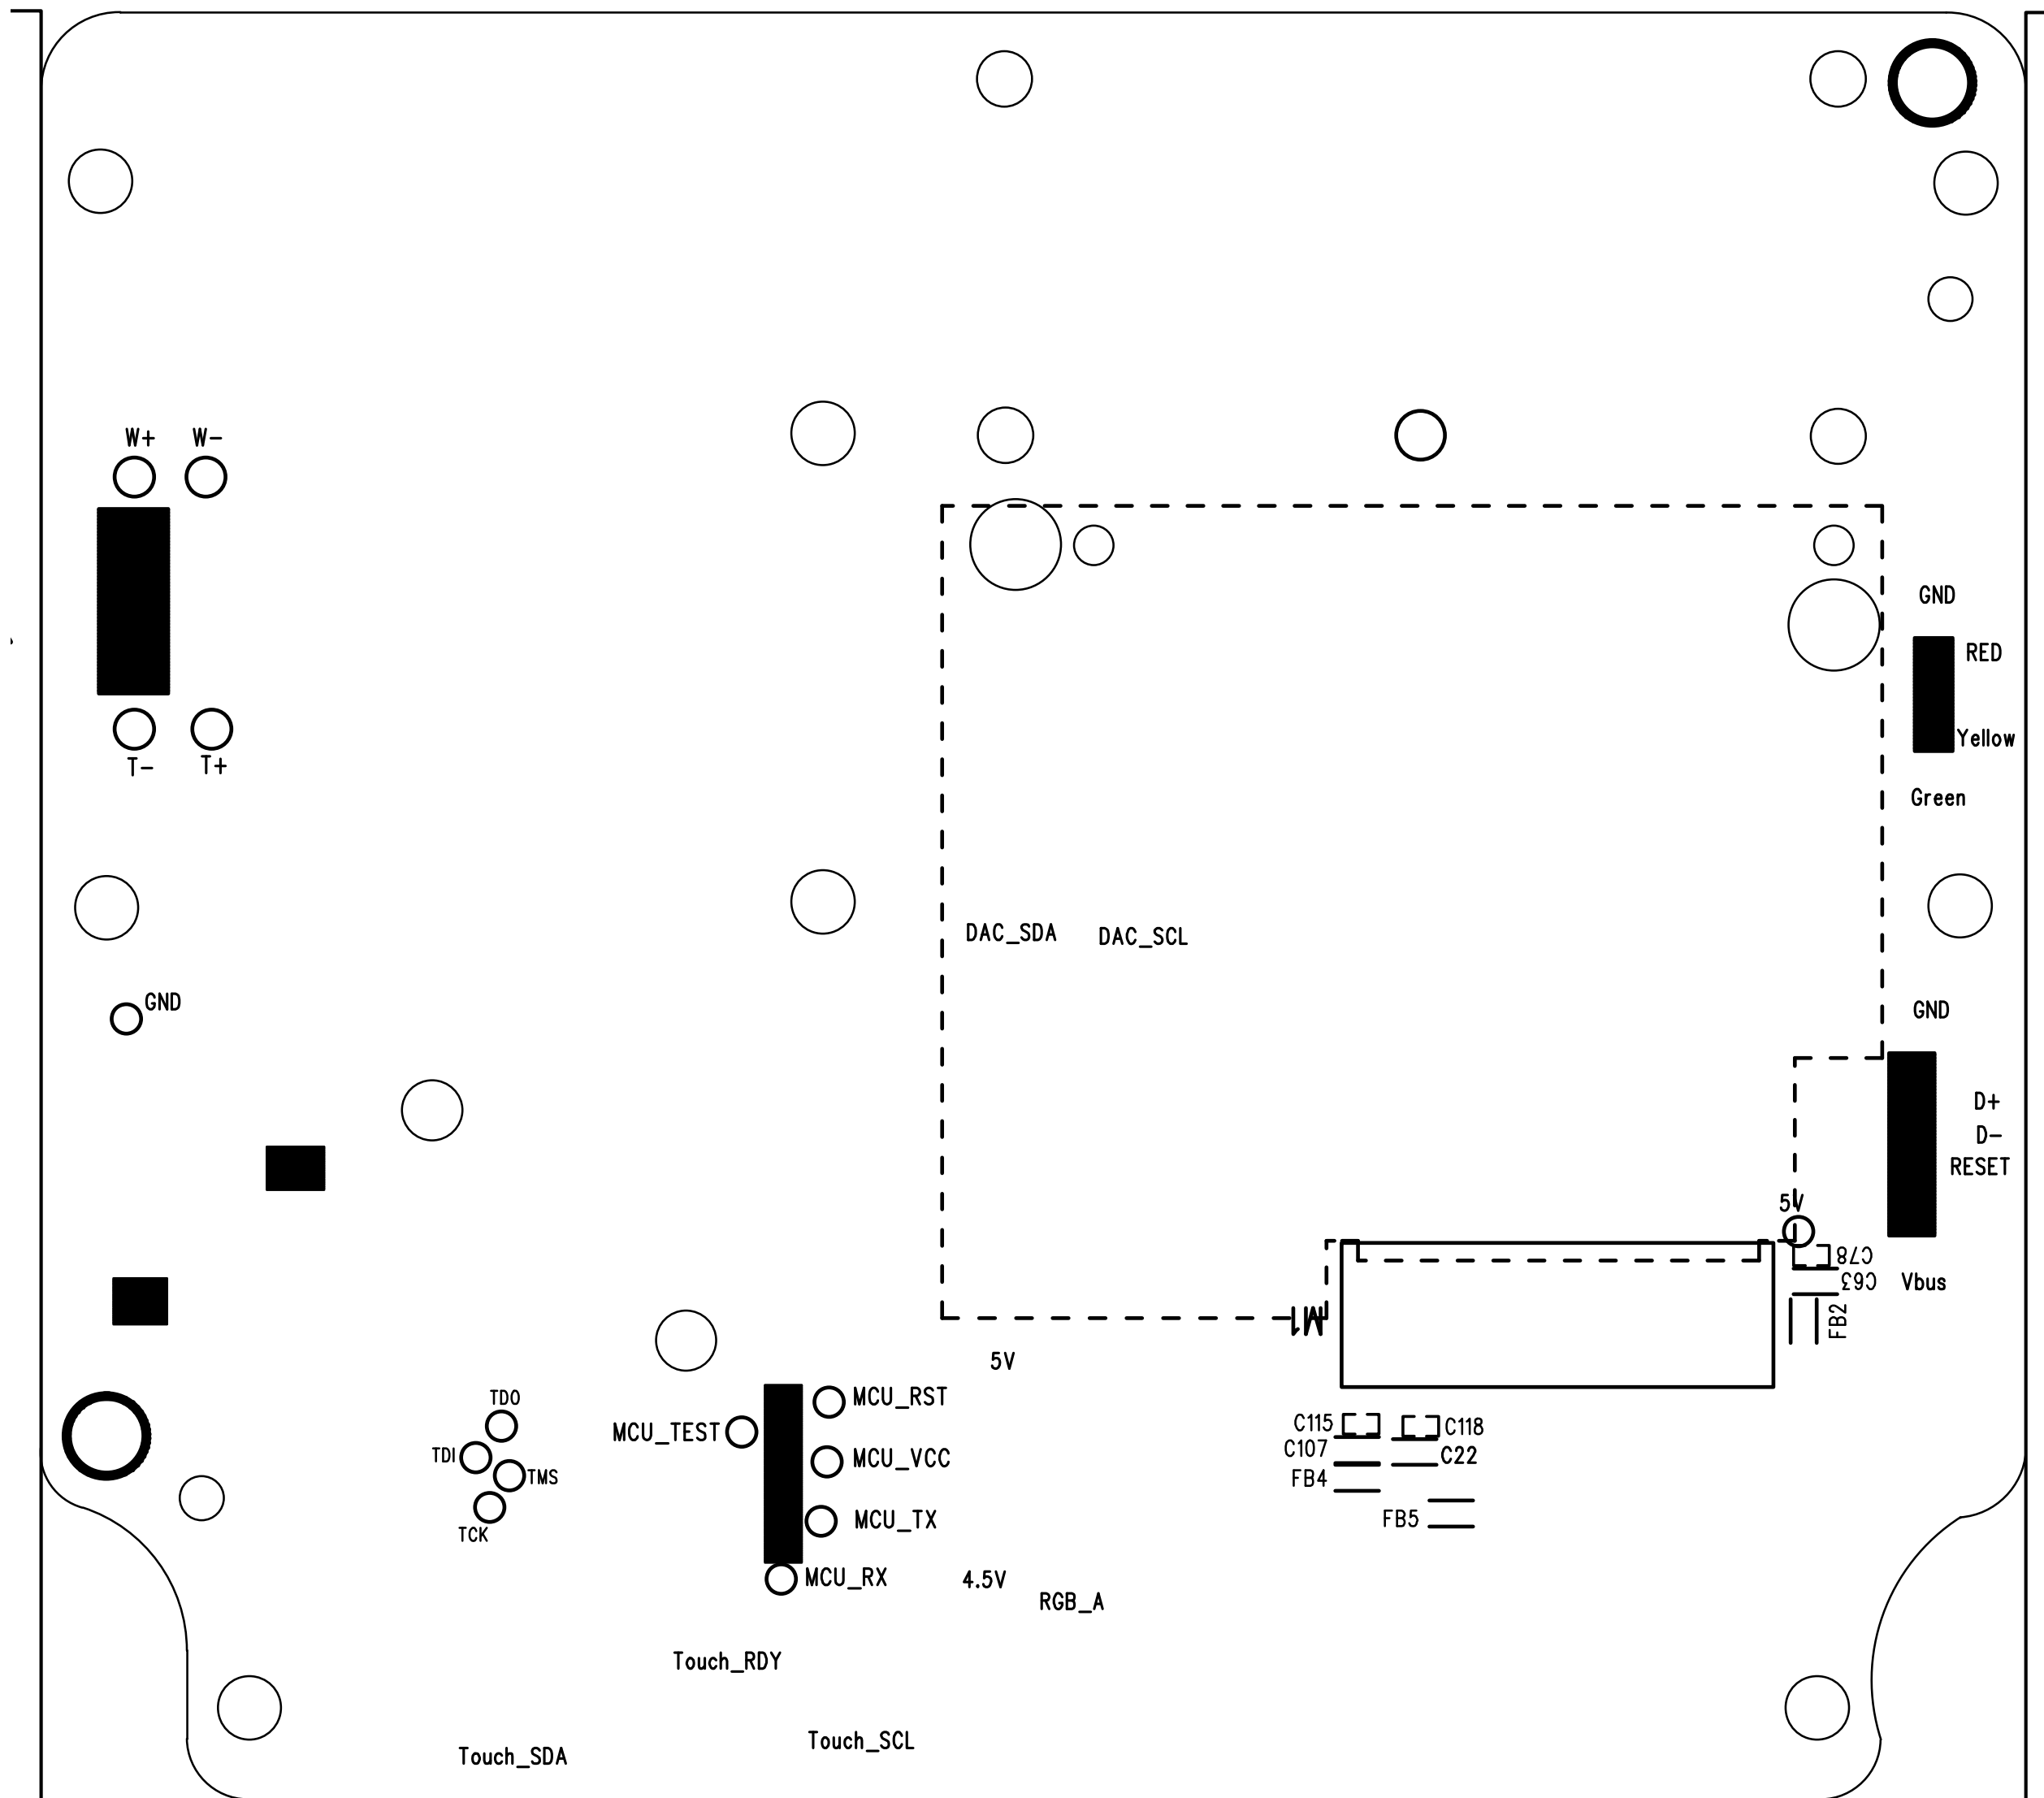


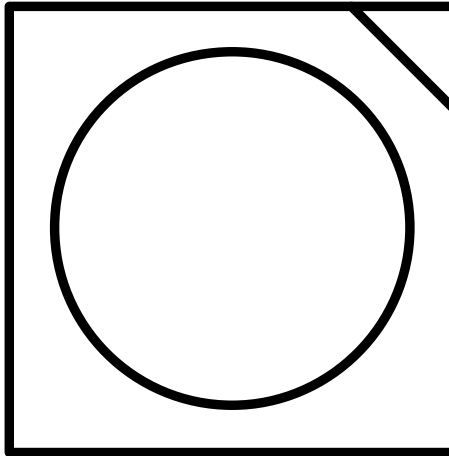


LED3
C70

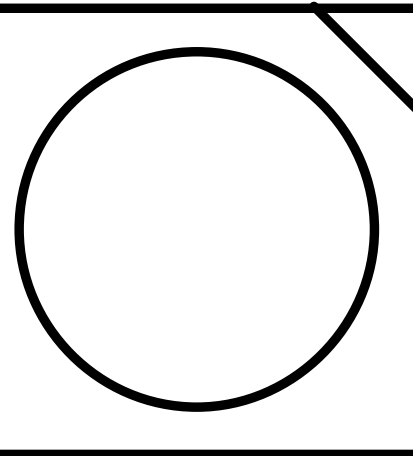

LED2
C71

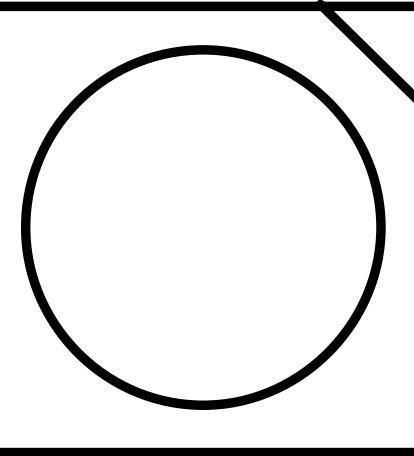


LED1
C72
R7

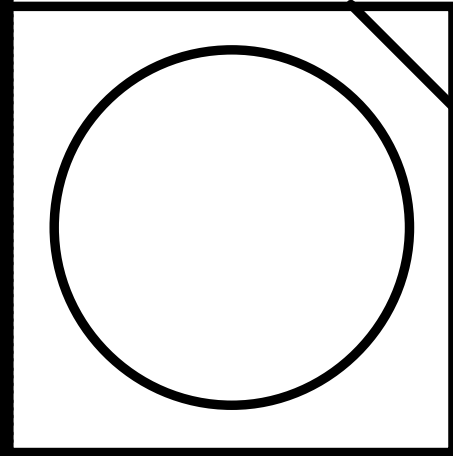


LED0
C73




BT

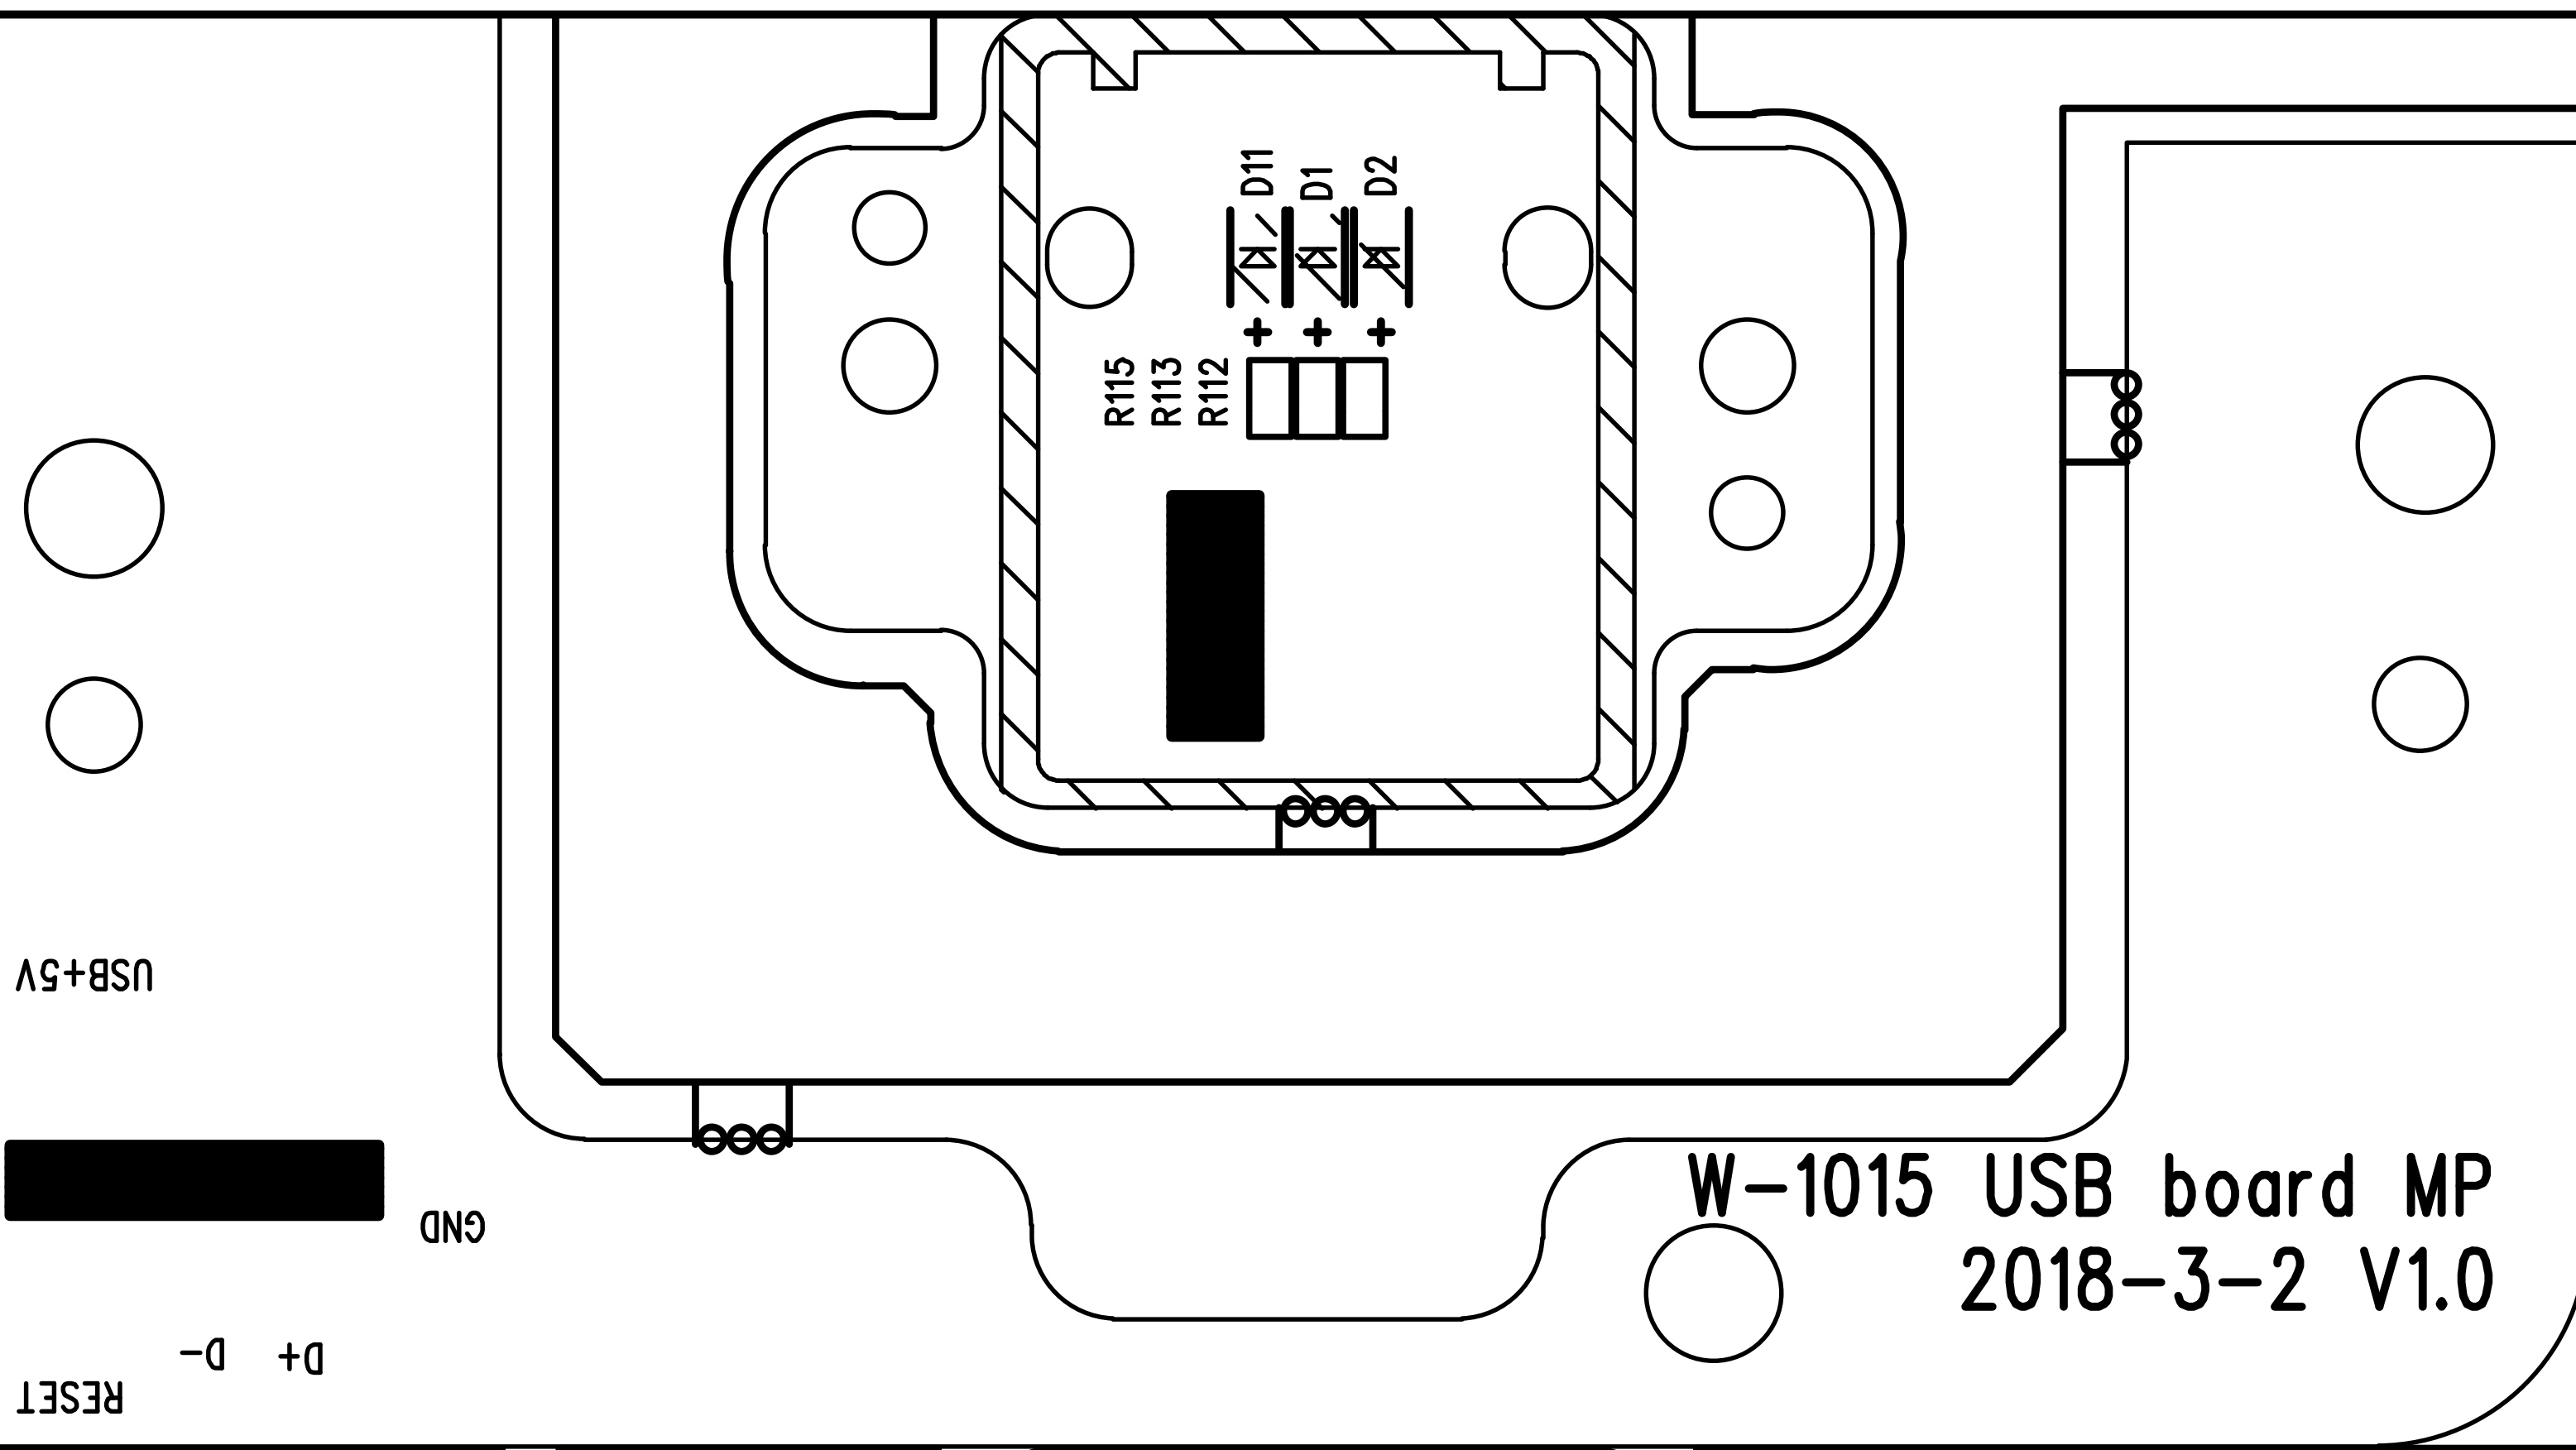

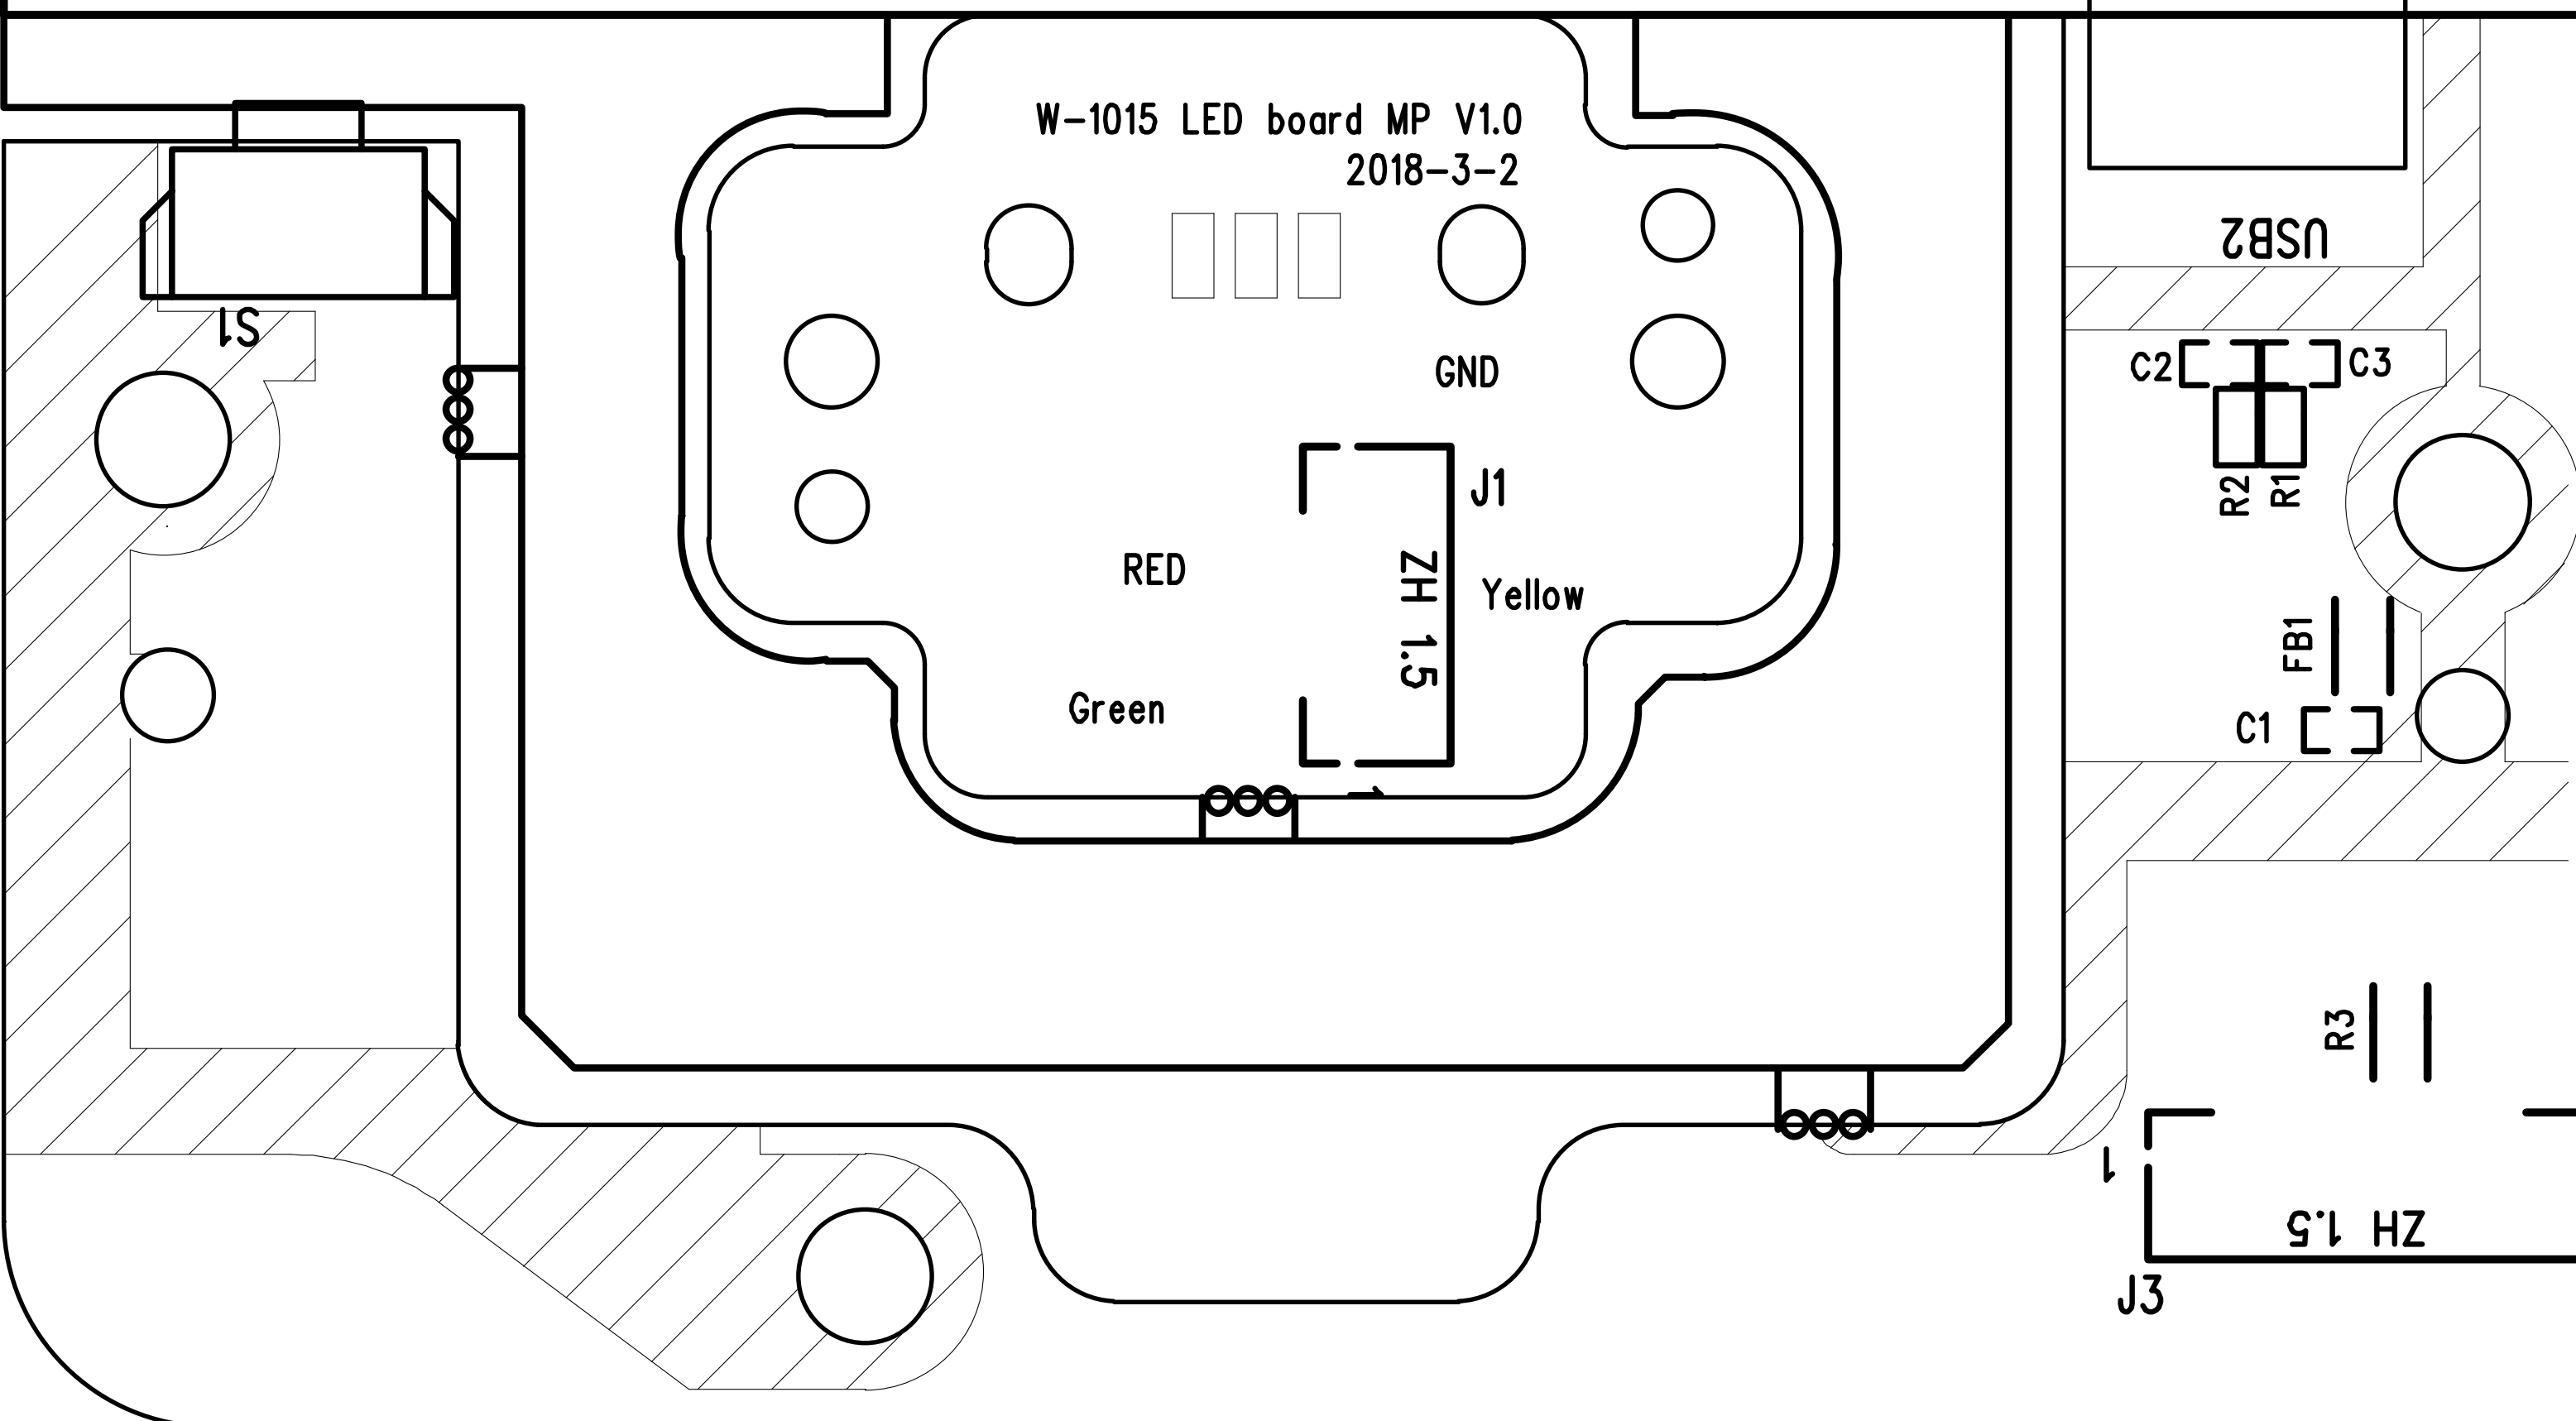

MECHANICAL EXPLODED VIEW

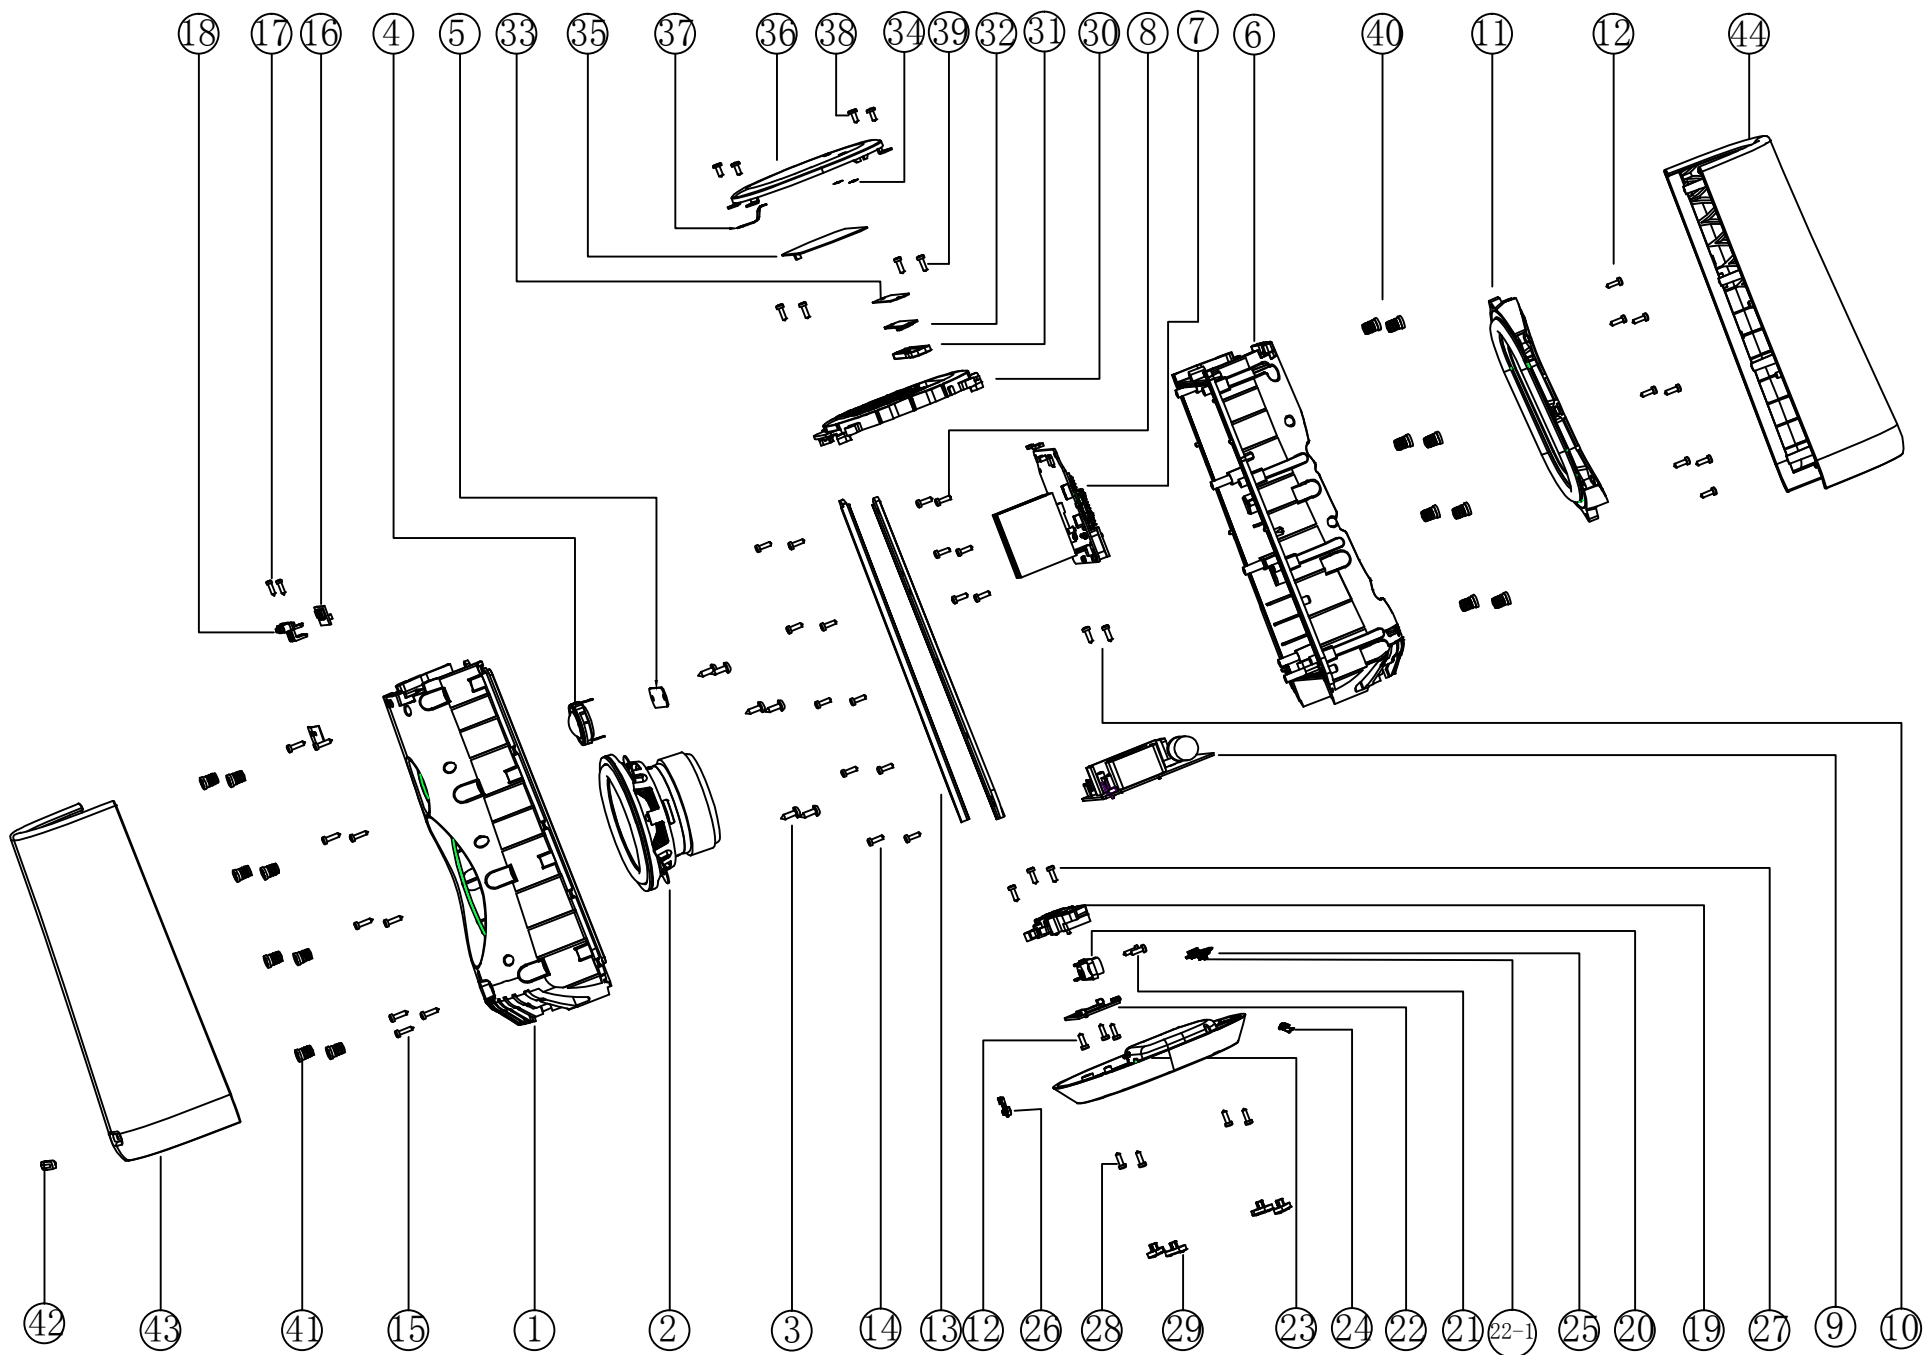

Pos. No.	P/N	Description	QTY
1	32200663	FRONT HOUSING BLK	1
1	32200662	FRONT HOUSING GRY	1
2	81200542	WOOFER 4" 4R 30W	1
4	81200642	TWEETER 0.75" 4R 30W	1
6	31102992	REAR HOUSING GRY	1
6	31102418	REAR HOUSING BLK	1
7+26	32100585	MAIN PCBA+ WIFI PCBA CITATION100UK	1
7+26	32100586	MAIN PCBA+ WIFI PCBA CITATION100RU	1
7+26	32100587	MAIN PCBA+ WIFI PCBA CITATION100AM	1
7+26	32100588	MAIN PCBA+ WIFI PCBA CITATION100EU	1
7+26	32100589	MAIN PCBA+ WIFI PCBA CITATION100AS	1
9	42200175	POWER ADAPTER DC19V/3A	1
11	81300130	PASSIVE RADIATOR GRY	1
11	81300123	PASSIVE RADIATOR BLK	1
16	31601027	LED PCBA	1
22	31601029	JACK PCBA	1
23	31300662	BOTTOM COVER GRY	1
23	31300663	BOTTOM COVER BLK	1
25	31601028	WIFI LED PCBA	1
29	45900908	RUBBER FOOT GRY	4
29	45900910	RUBBER FOOT BLK	4
30	45200490	TOP BRACKET BLK	1
30	45200487	TOP BRACKET GRY	1
35	31601030	TOUCH PCBA	1
36	32200664	TOP COVER BLK	1
36	32200665	TOP COVER GRY	1
42+43	32200497	FRONT GRILLE W/LOGO ASSY BLK	1
42+43	32200493	FRONT GRILLE W/LOGO ASSY GRY	1
44	32200498	REAR GRILLE ASSY BLK	1
44	32200494	REAR GRILLE ASSY GRY	1

HK CITATION 100 SPARE PARTS LIST

SAP name (P/N)	SAP Description	QTY	UoM	Pos. No.
32200662	FRONT HOUSING GRY CITATION100	1	EA	1
32200663	FRONT HOUSING BLK CITATION100	1	EA	1
81200542	WOOFER 4" 4R 30W CITATION100	1	EA	2
81200642	TWEETER 0.75" 4R 30W CITATION100	1	EA	4
31102418	REAR HOUSING BLK CITATION100	1	EA	6
31102992	REAR HOUSING GRY CITATION100	1	EA	6
32100585	MAIN PCBA+ WIFI PCBA CITATION100UK	1	EA	7+26
32100586	MAIN PCBA+ WIFI PCBA CITATION100RU	1	EA	7+26
32100587	MAIN PCBA+ WIFI PCBA CITATION100AM	1	EA	7+26
32100588	MAIN PCBA+ WIFI PCBA CITATION100EU	1	EA	7+26
32100589	MAIN PCBA+ WIFI PCBA CITATION100AS	1	EA	7+26
42200175	POWER BOARD CITATION100	1	EA	9
81300123	PASSIVE RADIATOR BLK CITATION100	1	EA	11
81300130	PASSIVE RADIATOR GRY CITATION100	1	EA	11
31601027	LED PCBA CITATION100	1	EA	16
31601029	JACK PCBA CITATION100	1	EA	22
31300662	BOTTOM COVER GRY CITATION100	1	EA	23
31300663	BOTTOM COVER BLK CITATION100	1	EA	23
31601028	WIFI LED PCBA CITATION100	1	EA	25
45900908	RUBBER FOOT GRY CITATION100	4	EA	29
45900910	RUBBER FOOT BLK CITATION100	4	EA	29
45200487	TOP BRACKET GRY CITATION100	1	EA	30
45200490	TOP BRACKET BLK CITATION100	1	EA	30
31601030	TOUCH PCBA CITATION100	1	EA	35
32200664	TOP COVER BLK CITATION100	1	EA	36
32200665	TOP COVER GRY CITATION100	1	EA	36
32200494	REAR GRILLE ASSY GRY CITATION100	1	EA	44
32200498	REAR GRILLE ASSY BLK CITATION100	1	EA	44
32200493	FRONT GRILLE W/LOGO ASSY GRY CITATION100	1	EA	42+43
32200497	FRONT GRILLE W/LOGO ASSY BLK CITATION100	1	EA	42+43
42000677	FFC CABLE 220MM WTH 4P CITATION100	3	EA	
42000678	FFC CABLE 80MM WTH 5P CITATION100	1	EA	
42300103	ANTENNA 2.4/5G 90MM CITATION100	1	EA	
42300104	ANTENNA 2.4/5G 190MM CITATION100	1	EA	
42400124	MIC MODULE INMP621 CITATION100	1	EA	
42900509	US POWER CORD BLK CITATION100	1	EA	
42900685	US POWER CORD GRY CITATION100	1	EA	
42900704	EU POWER CORD GRY CITATION100	1	EA	
42900705	EU POWER CORD BLK CITATION100	1	EA	
42900706	UK POWER CORD GRY CITATION100	1	EA	
42900707	UK POWER CORD BLK CITATION100	1	EA	
42900708	AU POWER CORD BLK CITATION100	1	EA	
42900709	AU POWER CORD GRY CITATION100	1	EA	
42900710	KR POWER CORD GRY CITATION100	1	EA	
42900711	KR POWER CORD BLK CITATION100	1	EA	
47101214	GIFT BOX US GRY CITATION100	1	EA	
47101269	GIFT BOX US BLK CITATION100	1	EA	
47101639	GIFT BOX AS BLK CITATION100	1	EA	
47101640	GIFT BOX AS GRY CITATION100	1	EA	
47101648	GIFT BOX EP BLK CITATION100	1	EA	
47101649	GIFT BOX EP GRY CITATION100	1	EA	
47102025	GIFT BOX RU BLK CITATION100	1	EA	
47102026	GIFT BOX RU GRY CITATION100	1	EA	
32100696	MAIN PCBA+ WIFI PCBA CITATION100MKIIEU	1	EA	7+26
47102259	GIFT BOX CITATION100MKIIGRYEU	1	EA	
47102334	GIFT BOX CITATION100MKIIBLKEU	1	EA	
47102482	GIFT BOX CITATION100MKIIBLKAM	1	EA	
47102483	GIFT BOX CITATION100MKIIGRYAM	1	EA	
47102484	GIFT BOX CITATION100MKIIGRYJN	1	EA	
47102485	GIFT BOX CITATION100MKIIBLKAS	1	EA	
47102486	GIFT BOX CITATION100MKIIGRYAS	1	EA	
47102487	GIFT BOX CITATION100MKIIBLKRU	1	EA	
47102488	GIFT BOX CITATION100MKIIGRYRU	1	EA	

REVISION LIST

Version 1.0

- * Initial release. Jul. 2018

Version 1.1

- * Block diagram corrected. Jul. 2018

Version 1.2

- * Circuit Diagrams updated to remove blue and yellow squares. Jul. 2018

Version 1.3

- * Correct Pos. No. for Front Grille and Rear Grille on Exploded View and Parts List. Aug. 2018

Version 1.4

- * Some mechanical part P/Ns corrected in Exploded View and Parts List. Aug. 2018

Version 1.5

- * Correct one description to Power Board from Power Adapter in Exploded View and Parts List. Feb. 2019

Version 1.6

- * Combine Main Board and WIFI Module into one Assembly. Feb. 2019

Version 1.7

- * Add SKU and Spare Parts for MKII. Oct. 2019